


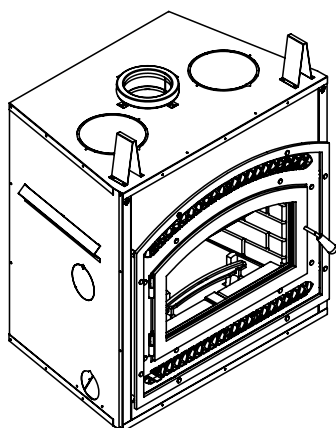

### SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

*A French manual is available upon request. Order P/N 900121-00.*

*Ce manuel d'installation est disponible en français, simplement en faire la demande. Numéro de la pièce 900121-00.*

**Fireplace, also for use in mobile or  
manufactured homes with solid fuel only.**



### ⚠ WARNING

- **Hot! Do not touch!** The glass and surfaces of this appliance will be hot during operation and will retain heat for a while after shutting off the appliance. Severe burns may result.
- **Carefully supervise children** in the same room as appliance.

- **If small children are present in the home, it is recommended that this appliance be fitted with an adjustable safety gate or barrier screen.**



Listed to standards:  
ULC-S610 and UL-127  
Report No. 307-4084  
EPA Cert. No. 537

# INSTALLATION AND OPERATION INSTRUCTIONS

## MONTECITO™

EPA Wood-Burning Fireplace  
P/N 900120-00 REV. NC 12/2013

### MODEL

### MONTE

This installation manual will enable you to obtain a safe, efficient and dependable installation of your fireplace system. Please read and understand these instructions before beginning your installation.

Do not alter or modify the fireplace or its components under any circumstances. Any modification or alteration of the fireplace system, including but not limited to the fireplace, chimney components and accessories, may void the warranty, listings and approvals of this system and could result in an unsafe and potentially dangerous installation.

IHP wood-burning fireplaces are designed for use as a supplemental heater. They are not intended for continuous use as a primary heat source.

### ⚠ WARNING

- **The fireplace cannot be operated without a door or firescreen. Consult your dealer to select the correct replacement door or firescreen.**
- **The fireplace is equipped with a blower, electrical connection must be made prior to fireplace installation**
- **Important! To assure proper alignment of glass doors: Install this fireplace in a square and plumb condition, using shims as necessary at sides and/or bottom.**
- **Install the fireplace only as described in these instructions.**

**NATIONAL  
FIREPLACE  
INSTITUTE**



[www.nficertified.org](http://www.nficertified.org)

We recommend that our woodburning hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Woodburning Specialists or who are certified in Canada by Wood Energy Technical Training (WETT).



**IMPORTANT! GENERAL SAFETY PRECAUTIONS. READ AND UNDERSTAND THESE SAFETY RULES BEFORE YOUR FIRST FIRE.**

**! WARNING**

The Montecito™ fireplace must be installed with an outside air kit intake, which is included with the fireplace

**! WARNING**

THE FIREPLACE MUST BE OPERATED WITH THE DOORS FULLY OPENED OR DOORS FULLY CLOSED. IF THE DOORS ARE LEFT PARTLY OPENED, GAS AND FLAME MAY BE DRAWN OUT OF THE FIREPLACE OPENING, CREATING RISKS OF BOTH FIRE AND SMOKE. IF THE UNIT IS OPERATED WITH THE DOORS FULLY OPENED, THE FIRE SCREEN MUST BE USED.

**! WARNING**

NEVER use gasoline, gasoline-type lantern fuel, kerosene, charcoal lighter fluid, naphtha, engine oil or similar liquids to start or "freshen up" a fire in this fireplace. Keep any flammable liquids a safe distance from the fireplace at all times.

**! WARNING**

THIS FIREPLACE HAS NOT BEEN TESTED WITH AN UNVENTED GAS OR A FIREPLACE INSERT. TO REDUCE RISK OF FIRE OR INJURY, DO NOT INSTALL AN UNVENTED GAS LOG SET OR FIREPLACE INSERT OR OTHER PRODUCTS NOT SPECIFIED FOR USE WITH THIS FIREPLACE.

**! WARNING**

Never leave your fireplace unattended while it is burning.

**! WARNING**

To avoid the risk of damaging fireplace materials and increasing the risk of fire, do not use the fireplace to cook or warm food.

**! WARNING**

Use care when selecting window treatments for windows located near the fireplace. Avoid using combustible flowing window treatments such as curtains on nearby windows that are of sufficient length to be blown in front of an open flame when the window is opened. Keep any combustible furniture, materials or decorative pillows at least 48" (1219 mm) from the front fireplace opening.

**! WARNING**

Never modify or alter your fireplace system in any way. To do so may create a potential fire hazard and void the limited warranty, listings and approvals of this system.

**! IMPORTANT**

When burning wood, use SOLID NATURAL DRY WELL-SEASONED WOOD ONLY. Hardwoods are recommended (softwoods tend to burn very quickly).

- DO NOT burn treated wood, charcoal, coal, trash, cardboard, driftwood, woods dipped in tar, Christmas tree greens, pitch, pine tar, creosote, chemical chimney cleaners, flame colorants, polystyrene packaging, wood products with synthetic binders (i.e. plywood). Plywood, lumber and other misc. materials can produce abnormally high temperatures, sputtering and smoking fires and may contain hazardous chemicals to treat insects and fungus.

- Burning unapproved fuels can produce excessive temperatures, beyond the design capabilities of the fireplace and may produce excess sparks or may contain hazardous chemicals. Burning unapproved fuels can result in a chimney fire, a house fire, personal injury, death or loss of property.

**! WARNING**

Never leave children unattended when there is a fire burning in the fireplace.

**! WARNING**

Always ensure that the air inlet to the fireplace is free from debris and any other obstructions that can block the entrance of air.

**! IMPORTANT**

**WHEN INSTALLED IN A MOBILE OR MANUFACTURED HOME:**

- Mobile or manufactured home installations must be installed in accordance with the requirements of the Department of Housing and Urban Development (HUD) "Mobile Home Construction and Safety standards" for US or Canada Mortgage and Housing Corporation (CMHC) for Canada.

- The fireplace must be fastened to the floor by unfolding and screwing the small tabs on both sides at the bottom of the fireplace.

- It is necessary to have access openings, for inspection purpose only, into built-in enclosures surrounding the fireplace installation. Such openings to require a household tool for access.

- The vapor barrier of the mobile home shall be as close as possible of the location where the chimney assembly penetrates the ceiling and roof structure with no interference to the required clearance to combustible material.

- When the mobile or manufactured home has a flat roof, the Attic Radiation Shield must be installed from below going through the roof (See *Figures 22b and 22d*).

- **Warning:** Do not install in a sleeping room.

- **Caution:** The structural integrity of the manufactured home floor, wall, and ceiling/roof must be maintained.

**! WARNING**

Neither the manufacturer nor the seller warrants "smoke free" operation nor are we responsible for inadequate system draft caused by mechanical systems, general construction conditions, inadequate chimney heights, adverse wind conditions and/or unusual environmental factors or conditions beyond our control.

## CONGRATULATIONS!

When you purchased your new fireplace, you joined the ranks of thousands of individuals whose answer to their home heating needs reflects their concern for aesthetics, efficiency and our environment. We extend our continued support to help you achieve the maximum benefit and enjoyment available from your new fireplace.

Thank you for selecting a IHP fireplace as the answer to your home supplemental heating needs.

### TABLE OF CONTENTS

|                                                                                   |         |
|-----------------------------------------------------------------------------------|---------|
| Safety Rules and Specifications for Mobile or Manufactured Home Installation..... | Page 2  |
| Introduction .....                                                                | Page 3  |
| Parts Required .....                                                              | Page 3  |
| Optional Equipment.....                                                           | Page 3  |
| Operating The Montecito Fireplace.....                                            | Page 3  |
| Fuel .....                                                                        | Page 3  |
| Starting And Maintaining A Fire .....                                             | Page 4  |
| Combustion Control .....                                                          | Page 4  |
| Refueling For Best Performance .....                                              | Page 4  |
| Smoking – Causes And Troubleshooting .....                                        | Page 4  |
| Important Cautions .....                                                          | Page 5  |
| Maintaining Your Fireplace.....                                                   | Page 5  |
| Creosote.....                                                                     | Page 5  |
| Chimney Maintenance.....                                                          | Page 5  |
| Dealing With A Chimney Fire.....                                                  | Page 5  |
| Finish Door Casing Care.....                                                      | Page 5  |
| Disposing of Ashes .....                                                          | Page 6  |
| Refractory Installation.....                                                      | Page 6  |
| Door Installation .....                                                           | Page 6  |
| Door Adjustment.....                                                              | Page 6  |
| Facade Installation .....                                                         | Page 7  |
| Hearth Extension Requirements.....                                                | Page 7  |
| Cold Climate Installations.....                                                   | Page 7  |
| Framing Dimensions .....                                                          | Page 8  |
| Nailing Flanges.....                                                              | Page 9  |
| Facing And Mantel .....                                                           | Page 9  |
| Fireplace Blower.....                                                             | Page 10 |
| Hot Air Ducting Installation .....                                                | Page 10 |
| Gravity Kit .....                                                                 | Page 10 |
| Outside Air Kit .....                                                             | Page 11 |
| Chimney System .....                                                              | Page 12 |
| Chimney Installation Notes .....                                                  | Page 12 |
| Chimney Installation Instructions.....                                            | Page 13 |
| Offset Chimney Installation .....                                                 | Page 14 |
| Angled Wall Radiation Shield .....                                                | Page 16 |
| Glass Care - Replacement .....                                                    | Page 17 |
| Glass Care - Cleaning .....                                                       | Page 17 |
| Gasket Replacement .....                                                          | Page 17 |
| Fireplace Installation .....                                                      | Page 17 |
| Chimney Support Installation.....                                                 | Page 18 |
| Chimney Chase And Multiple Terminations.....                                      | Page 18 |
| Masonry Application Instructions .....                                            | Page 19 |
| Installation Accessories .....                                                    | Page 20 |
| Replacement Parts.....                                                            | Page 21 |
| Specifications.....                                                               | Page 21 |
| Clearances to Combustibles .....                                                  | Page 21 |
| Chimney Components Lists .....                                                    | Page 22 |
| Warranty .....                                                                    | Page 25 |
| Product Reference Information.....                                                | Page 26 |

### THE FIREPLACE INTRODUCTION

The Montecito™ wood-burning fireplace is an energy efficient, heat circulating, closed combustion fireplace. You will receive a lifetime of comfort and enjoyment from your fireplace provided it is installed, maintained and operated properly.

- Please read these instructions and retain this manual for future reference.
- Before beginning the fireplace installation, consult the local authorities to obtain your building permit and check your local building codes. Install the fireplace only as described in these instructions and using only IHP components.
- This fireplace has been tested for CAN/ULC S610-M87 and ANSI/UL 127 under report number 307-4084. It has also been tested for EPA 40 C.F.R Part 60, section 60.532(b). Certificate number 537.
- The Montecito fireplace is NOT intended for use with a gas log set. Do not use a fireplace insert or any other product with this fireplace unless it is specified by IHP for use with this appliance. Failure to follow these instructions will void the certification and the warranty of the fireplace and may result in an unsafe installation.
- These appliances are designed to provide supplemental heat to the immediate area only. Therefore, it is advisable to have an alternate heat source when installed in a dwelling.

### PARTS REQUIRED

#### Fireplace Model MONTE

- **6" diameter chimney** \* - Model ASHT+, S-2100+, HT6000+, HT6103+ or AC manufactured by Security Chimneys International™ only, including:
  - Chimney lengths
  - Elbows (*where necessary*)
  - Associated components as per these installation instructions
- **Decorative Door** - Required (Order Separately - See **Page 20**)
- **Front Facade kit** - Required (Order Separately - See **Page 20**)
- **UZY5 blower** (included in the fireplace).
- **VRUW Blower Speed Control** (included)
- **Outside air kit** (Included w/Fireplace)

### OPTIONAL EQUIPMENT

- **Additional Equipment (optional)**
  - Forced Air Kit ❶
  - AC Chimney Adaptor \* (*required if using AC Chimney*)

- AC Chimney Outside Air Kit
- Gravity Venting System
- Rigid Firescreen

❶ **Not tested under EPA certification. If installed, this appliance no longer qualifies for EPA certification.**

### OPERATING THE FIREPLACE

#### Fuel

**USE SOLID NATURAL WOOD FUEL ONLY.** The Montecito fireplace is designed to work best when fueled with dry seasoned natural wood only. Hardwoods are preferred to softwoods since the energy content of wood is relative to its density. Hardwoods will result in a longer burning fire and less frequent refueling. A moisture content of 15% to 20% (seasoned) is recommended. Wood that has been cut and split and let to dry under a cover for a period of one year will usually meet that criteria. The required drying time will vary depending on the climate. Wood that is packed tight together will take longer to dry. Seasoned wood is darker in color than wet wood and will have visible cracks in the grain on the ends. Excessively wet wood will be difficult to burn and will result in lower efficiency, increased creosoting and deposits on the glass and in the chimney. Excessively dry wood will burn well but will also have higher emissions and shorter burning time.

Do not burn scrap or garbage, treated wood or wood such as driftwood from the ocean which has been exposed to salt or other chemicals. Salt or chemicals can corrode the firebox and chimney. Do not burn large amounts of paper, cardboard, Christmas tree branches or building construction materials. Intense firing with these materials may overheat the fireplace, causing damage to the unit, a fire or even possibly igniting a chimney fire if the chimney is creosoted. Burning unapproved fuel, resulting in excessive pollutants being emitted, may be prohibited and subject to a fine or other penalty by the authority having jurisdiction in your area.

Processed firelogs can be used. Although, do not poke or stir the logs while they are burning. Use only firelogs that have been evaluated for the application of fireplace and refer to firelog warnings and caution markings on packaging prior to use.

#### First Fires

**Before using the fireplace make sure to remove the plastic wrapping and EPA label on plated door. Remove any glue residue left by the label using mild soap.**

The first five or six fires should be small fires of short duration (about 30 to 60 minutes). This will help cure the refractory bricks. During the first few fires of this appliance there may be some odor and smoke due to the curing of the paint, dust accumulation and burning off of lubricants used in the manufacturing process. It may set off a smoke alarm located in the same room. For this reason the room should be well ventilated for the first few fires.

## ⚠ WARNING

**Be careful adding wood fuel to the fire or handling fireplace tools such as shovels, tongs or pokers.**

## ⚠ WARNING

**The bottom refractory can be cracked by excessive abuse such as tossing heavy logs onto the grate or gouging with fireplace tools. Exercise caution when adding wood to your fireplace.**

### Building a Fire (starting and maintaining a fire)

To start a fire, place several crumpled up balls of newspaper in the firebox. Place small dry pieces of kindling on top of the paper, criss-crossing the kindling so that there are air spaces in between. Keep the fuel far back enough so that air can get underneath. Open the air controls fully and light the newspaper. Once the newspaper and the kindling is well ignited, close the door. Once the kindling fire is well established, cord wood can be added (see *Primary Air Combustion Control* section for proper operation of the air controls).

The unit will burn best with 2-3 pieces of cord wood spaced 1 to 2 inches apart and allowing air to get under the fuel. Criss-crossing or arranging the fuel so that air can get underneath, will help the fire to get started easily. The unit should be operated with the air control fully open long enough to get the cord wood well ignited.

## COMBUSTION CONTROLS

### Primary Air and Air Boost Controls

There is no flue damper in the Montecito™ wood burning fireplace. As is common with air tight stoves, the combustion air control sets the flow of air entering the firebox. This allows for a more precise control of the fire. The combustion air control is located below the door on

the left side. The main source of air (primary air) entering the firebox can be diminished by moving the air combustion control from left to right. The primary air is fully opened when the air control is completely moved to the left. The air control device can also be used to add an extra boost of air especially during fire start up and reloading of the unit.

Pulling the air combustion control will induce an air boost at the base of the fire allowing an easier fire start up. When the fire is well established, the control can be pushed in to shut down the air boost allowing for a longer burn time. The combustion air control should be in the closed position (primary air and air boost) when the fireplace is not in use. This will minimize air leakage up the chimney. The combustion air control should be opened before opening the door to minimize the possibility of back draft coming into the room.

### Accelerated Combustion

The maximum heat output for the Montecito fireplace is achieved by burning with the door closed and the combustion air opened and pulled out. By this method, the Montecito fireplace can produce up to 55,000 BTU of heat per hour. However, it will be necessary to reload with wood every one or two hours. This is the least efficient method of burning the Montecito fireplace.

Use caution when firing with the combustion air control wide open. Only burn cord wood in this manner. Small dry pieces of softwood and construction scraps will burn very intensely using this method and may damage the firebox.

### Medium Combustion

This is the recommended mode of operating the Montecito fireplace and should be the one normally used since it will deposit the least amount of creosote on the glass and in the chimney. The combustion air control must be 3/4 closed and pushed in to close the air boost. The precise setting will depend on many factors, including chimney length and the moisture content of the wood.

For instance, a long chimney will necessitate closing the damper more. To obtain the proper combustion, close the damper completely, then open it about 1/4" to 1/2". Three medium size pieces of wood should be burning on a bed of hot coals. The heat output will be approximately 30,000 BTU per hour and the loading time will be about every 3-4 hours. Softwoods may be burned using this method but the time will be substantially reduced.

### Slow Combustion

When the air combustion control is completely closed, the fireplace is in a slow combustion phase. If the hearth is hot enough, slow combustion will not extinguish the fire, but there will be a noticeable change in the flame pattern. The flames will be slow and may appear dirty if the wood is too wet (moisture content of 20% and more). Do not allow the wood to burn without flame, since this will produce excessive creosote in the unit.

Creosote may accumulate on the glass door. This method of burning should be used only after operating the Montecito fireplace with the air control opened to produce a hot fire for about an hour or at medium pace for at least three (3) hours. Slow combustion can be used at night in order to reduce the heat output and to prolong the burn. The loading time will be between 6-8 hours.

## REFUELING FOR BEST PERFORMANCE

The Montecito fireplace will operate best if attention is given to operating the unit with the damper fully opened after refueling in order to bring the firebox and the chimney system up to their optimum operating temperature. Combustion efficiency is relative to firebox temperature. A temperature of 500° C (932° F) and up, with a visible flame, in the upper part of the firebox indicates a maximum efficiency. To obtain this temperature, the fireplace must be operated with the primary air and air boost controls fully opened during 10 to 20 minutes after reloading, depending on the heat and on the moisture content of the wood.

Once you have reached the desired temperature, the air boost can be closed and the primary air set to a medium setting. You know you have reached the desired temperature when, closing the primary air control, you can see a flame at the top of the firebox. The benefit of this technique will be cleaner glass, less creosoting, greater efficiency and the most pleasing fire for your enjoyment.

## SMOKING – CAUSES AND TROUBLESHOOTING

To reduce the likelihood of smoking when opening the door, set the combustion air controls to the left before opening the door. Your fireplace has been designed and tested to provide smoke free operation. Occasionally, there may be a small amount of smoking upon lighting the fire, until the chimney heats up but this should not continue. If the fireplace continues to smoke it is probably for one of the following reasons:

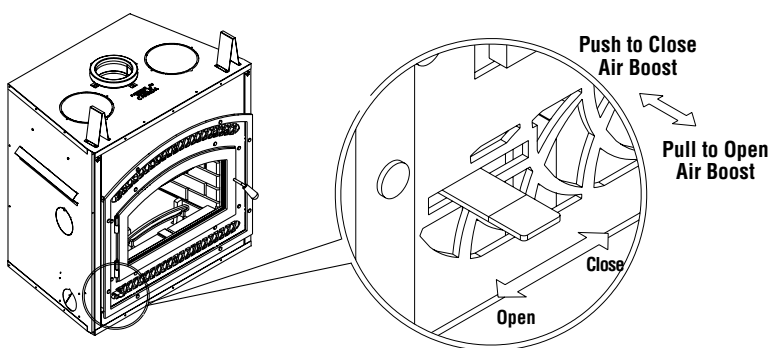


Figure 1

Combustion Air Register



- A. Negative pressure in the house** - As the fire burns, air goes up the chimney. This air must be replaced through leakage into the house or through the outside air duct. When operating the Montecito fireplace, open a nearby window temporarily to check if there is adequate replacement air supply.
- B. Fans operating (e.g.: range hood)** - These fans draw air out of the house and may actually cause a negative pressure in the house. Turn off all fans and open a nearby window to determine if this is the cause of the problem.
- C. Wet wood** - Wet or tarred wood will smoulder and smoke instead of burn properly. Your dealer can help you determine if you have properly seasoned wood for burning.
- D. Dirty or blocked chimney** - Check to make sure the chimney is clear and clean. If dirty call a certified chimney sweep or use a properly sized chimney brush to clean.
- E. Chimney not long enough** - The minimum chimney height is twelve (12) feet (3.7 m) not including the fireplace height. The chimney must extend at least three (3) feet (915 mm) above its point of contact with the roof and at least two (2) feet (610 mm) higher than any roof or wall within ten (10) feet (3 m) of it. When installed with offsets, the minimum chimney height is fifteen (15) feet (4.6 m). Additional height will increase draft and will decrease the tendency to smoke.
- F. Poor chimney draft** - With no fire, there should be sufficient draft to exhaust cigarette smoke introduced under the baffle. Chimneys installed against an outside wall without protection may generate back draft problems which will cause start-up problems. To prevent this, open a nearby window, roll up a piece of paper and light it. Then, hold it in the upper part of the firebox to warm up the chimney. Wait until the draft is sufficient, then start the fire.

## IMPORTANT CAUTIONS

- A. Do not block the hot air vents to the fireplace as this will cause the fireplace to overheat.**
- B. Never use gasoline, gasoline-type lantern fuel, kerosene, charcoal lighter fluid, or similar liquids to start or 'freshen up' a fire in this fireplace. Keep all such liquids well away from the fireplace while it is in use.**
- C. Do not burn coal. The sulphur in coal will corrode the firebox and chimney.**
- D. Keep combustible materials at least 48" (1.2 m) away from the front of the fireplace opening.**
- E. Never leave children unattended when there is a fire burning in the fireplace.**
- F. Do not use the fireplace as an incinerator to burn paper, cardboard or construction material such as pressed wood, plywood or lumber. Use only untreated wood. Wood protectors, metallic paper, coal, plastic, waste, beach wood, Christmas tree, sulphur and/or oil will damage the fireplace.**

**G. Do not burn driftwood which has been in the ocean or salt water. The salt will corrode the firebox and chimney.**

**H. Do not burn wood in the area in front of the grate.**

**I. Do not allow the wood to smoulder or burn without flame, since this will produce excessive creosote in the unit as well as increased particulate emissions.**

**J. Blower for forced air kit operating** - Make sure that the blower is at the "off" position when you open the fireplace door for reloading.

## MAINTAINING YOUR FIREPLACE

### Creosote - Formation and Need for Removal

When wood is burned slowly, it produces tar and other organic vapors, which combine with expelled moisture to form creosote. The creosote vapors condense in the relatively cool chimney flue of a slow-burning fire. As a result, creosote residue accumulates on the flue lining. When ignited this creosote makes an extremely hot fire.

The chimney shall be inspected at least twice a year during the heating season to determine when a creosote buildup has occurred.

When creosote has accumulated it shall be removed to reduce the risk of a chimney fire.

When the creosote accumulation is large, a creosote fire in the chimney can damage the chimney and overheat the surrounding wood framing. Creosote formation in a chimney can be minimized by making sure there is always visible flame burning, avoid smouldering fires and by proper refuelling techniques.

### Chimney Maintenance

Regular chimney inspection and maintenance combined with proper operation will prevent chimney fires. Keep your chimney clean. Do not allow more than 1/16" (1.6 mm) creosote build up in your chimney. The amount of creosote will depend on variables such as frequency of use and type of fire. We recommend that you:

- A. Initially inspect the chimney system weekly.** From this, you will learn how often it will be necessary to clean your chimney.
- B. Have your chimney cleaned by a qualified chimney sweep.** If you wish to clean it yourself, we recommend using a stiff plastic or non-metallic brush. If a metal brush is used, its size should be slightly smaller than the flue to avoid damaging the chimney. Do not use a brush that will scratch the stainless steel interior of the chimney.
- C. Do not expect chemical cleaners to keep your chimney clean.** The rain cap can be removed for inspection and/or cleaning of the chimney.

**Caution: It is necessary to remove the baffle from the top of the firebox before cleaning the chimney. See "Top Baffle Removal Prior To Chimney Sweep."**

## Dealing With a Chimney Fire



Regular chimney maintenance and inspection can prevent chimney fires. If you have a chimney fire, follow these steps:

1. Close the fireplace door and the combustion air controls.
2. Alert your family of the possible danger.
3. If you require assistance, alert your fire department.
4. If possible, use a dry chemical fire extinguisher, baking soda or sand to control the fire. Do not use water as it may cause a dangerous steam explosion.
5. Check outside to ensure that sparks and hot embers coming out of the chimney are not igniting the roof.
6. Do not use the fireplace again until your chimney and fireplace have been inspected by a qualified chimney sweep or a Fire Department Inspector.

### Top Baffle Removal Prior to Cleaning The Chimney

Before starting to clean your chimney, we recommend that you remove the top baffle to avoid creosote dust collection at the top of the baffle. Follow these steps to set the top baffle out of the way:

1. Remove the side refractory holder. They are located at the top of the refractory.
2. Lift the front baffle.
3. Slide the back baffle under the front baffle. You now have access to the chimney.

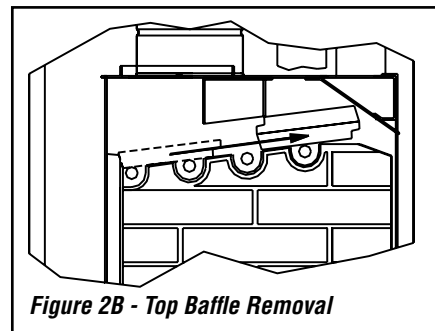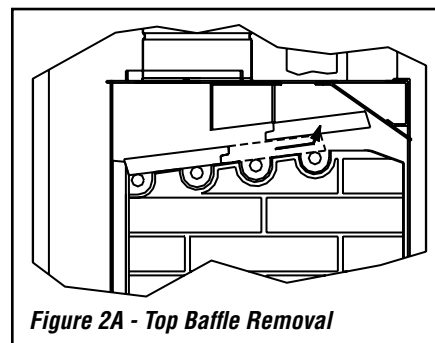

### Finish Door Casing Care

Use a glass cleaner and a soft cloth to polish the casing. Do not use abrasives such as steel wool, steel pads or an abrasive polish for they may scratch the casing's finish.

## DISPOSING OF ASHES

**NOTE:** For better performances, we recommend leaving 1/2 inch of ashes in the firebox.

Remove ashes only when the fire is out and the ashes are cold (24 to 48 hours after the fire is out).

Do not leave the ashes in the house as they give off carbon monoxide and other toxic gases.

## WARNING

**Disposal of Ashes:** Ashes should be placed in a steel container with a tight fitting lid and moved outdoors immediately. The closed container of ashes should be placed on a non-combustible floor or on the ground well away from all combustible materials, pending final disposal. If the ashes are disposed of by burial in soil or otherwise locally dispersed, they should be retained in the closed container until all cinders have thoroughly cooled.

## REFRACTORY REPLACEMENT

The intense heat of the fire will normally cause hairline cracks in the refractory. These cracks can be minimized by proper curing as described in "First Fires". They will not normally diminish the effectiveness of the refractory. If large cracks develop, then the refractory should be replaced. To replace the refractory bricks, follow these steps:

1. Remove the front refractories
2. Remove the bottom refractory
3. Remove the left side refractory
4. Remove the right side refractory
5. Remove the back refractory
6. Remove the front ceramic baffle
7. Remove the rear ceramic baffle

To install the new refractories, follow the above steps in reverse.

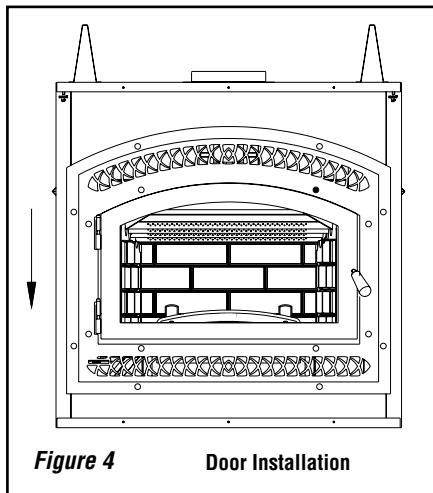


Figure 4 Door Installation

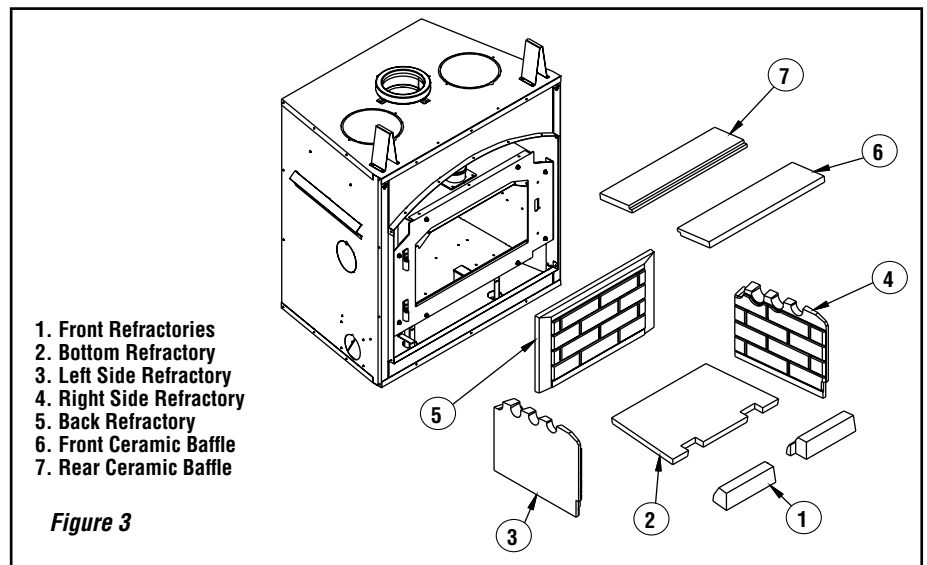


Figure 3

## DOOR INSTALLATION

The door must be installed only when the installation of the Montecito™ fireplace is completed. All you have to do is fit the male part of the hinge, already on the door, to the female part, which is on the fireplace. To remove the door, simply pull the door up from the hinges (see Figure 4). The door adjustment has been set at the factory. If the fit is still not perfect, you can adjust the door using the hinge screws.

## DOOR ADJUSTMENT

The door may need to be adjusted to be completely airtight. The gaskets' air-tightness can be adjusted using the adjustment screw located on the right side of the fireplace facade (An Allen key #1/8 – not supplied - will be necessary for this adjustment).

## Checking Door Seal

A one-inch strip of paper may be used to perform a test of the integrity of the door seal. Close the door on the paper in at least eight points. It is normal to feel only a slight amount of friction. The door gasket does not need to be "tight" in all areas, since a small amount of leakage is not hazardous or detrimental to the performance of your fireplace.

## WARNING

- Use only a IHP glass doors, specifically designed for the Montecito fireplace.
- The fireplace cannot be operated without door or firescreen. Consult your dealer to select the correct replacement door or firescreen.
- Important! To assure proper alignment of glass doors: Install this fireplace in a square and plumb condition, using shims as necessary at sides and/or bottom.

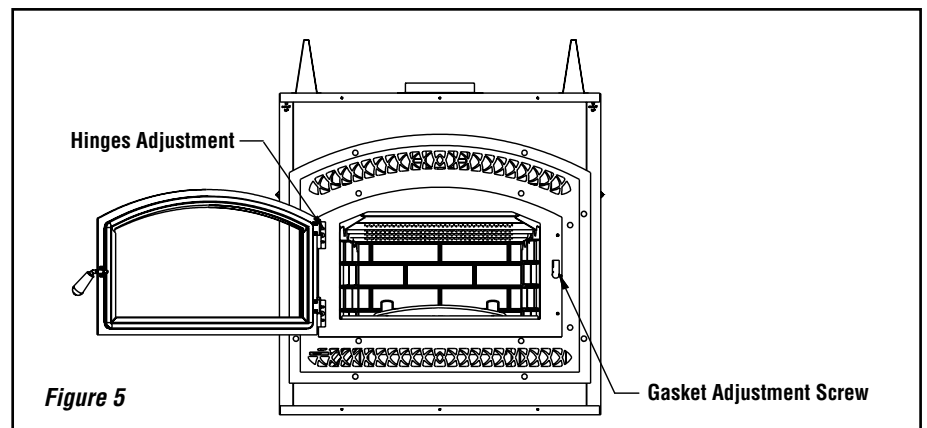


Figure 5

## Facade Installation

Install the Facade per instructions provided in Facade Kit (ordered separately - see **Page 20**).

### Framing, Facing And Mantel

The construction of the framing, facing, and mantel must be in accordance with the standards and the following illustrations (**Figures 10 and 11**):

- A. Frame the fireplace using 2" x 3" or heavier lumber.
- B. **WARNING: Combustible materials cannot be used in the space directly above the fireplace, except for the studs above the facade that support the facing and mantel. This area must remain empty for a height of 6'8" (2,032 mm) measured from the base of the appliance.**
- C. Frame the fireplace with vertical studs at the sides of the fireplace running from floor to ceiling (see **Figure 8**). If combustible facing is to be used, position the studs back, from the front edge of the fireplace (a space that is the thickness of the facing material, so that the facing can be installed flush with the fireplace facing). Frame headers between the vertical studs only as follows:
  - Place 2" x 3" or 2" x 4" headers, only along the upper part of the front, side and back faces (some codes may require a 2" x 6" on an outside bearing wall). Do not put wood or any combustible material within the area above the fireplace except on the front facing.
  - Place headers only as required to support the facing and mantel.
- D. **WARNING: The fireplace must not be in contact with any insulation or loose filling material. Cover the insulation with drywall panels around the fireplace.**

### Hearth Extension Requirements

The Montecito™ fireplace may be installed directly on a combustible floor. The supplied safety metal strip must be positioned as follows: One half under the front of the fireplace and the other half must extend on the floor over which the hearth extension will be built (see **Figure 7A**).

\* The safety metal strip must cover the entire width of the fireplace.


The combustible floor in front of the fireplace must be covered with a non-combustible material (tile, marble, stone, etc). See **Figures 7B**.

### COLD CLIMATE INSTALLATIONS


**Climates where temperatures will fall below 32° F (0° C).**

The heating performance of the appliance will vary depending upon the level of insulation, house design, how the appliance is operated, etc.

If this fireplace is being installed in a cold climate, it is especially important to seal all cracks around the fireplace and wherever cold air could enter the room with noncombustible material.

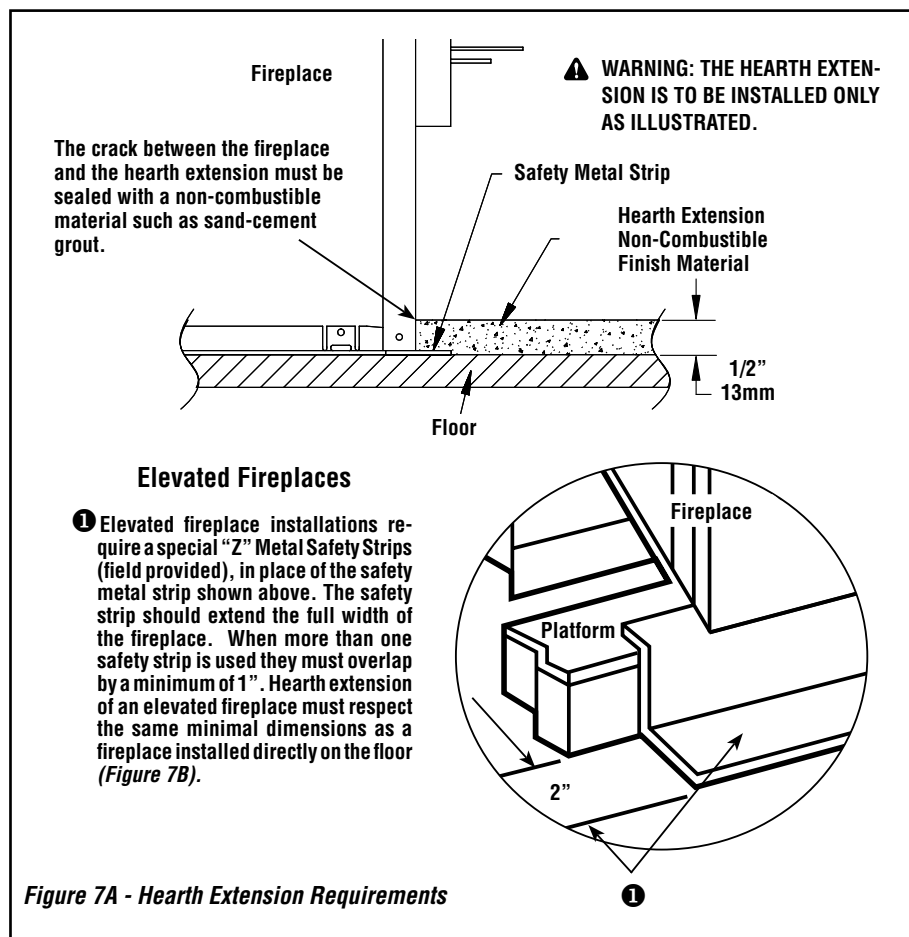



**Figure 7A - Hearth Extension Requirements**

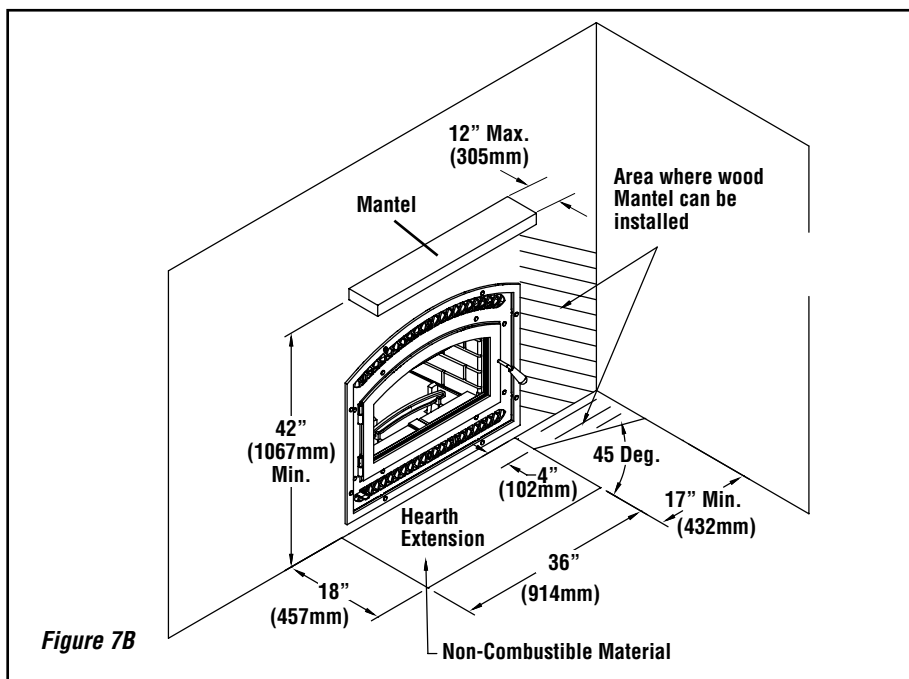



**Figure 7B**

Also, the outside air inlet duct should be wrapped with noncombustible insulation to minimize the formation of condensation. Do not place insulation materials directly against the chimney sections. We recommend that you use the insulated wall radiation shield since it will maintain the home's thermal barrier. AC chimney is NOT recommended in very cold climates (in areas with temperatures below 32°F (0°C)).


| FRAMING DIMENSIONS<br>Fireplace Opening Width |          |         |
|-----------------------------------------------|----------|---------|
| A                                             | 36-1/4"  | 921 mm  |
| B                                             | 42"      | 1067 mm |
| C                                             | 30-1/16" | 764 mm  |
| D                                             | 13-1/2"  | 343 mm  |
| E                                             | 77"      | 1956 mm |
| F                                             | 37-1/2"  | 953 mm  |
| G                                             | *24-1/2" | 603 mm  |
| J                                             | 53-3/4"  | 1365 mm |
| K                                             | 8"       | 203 mm  |
| L                                             | 1"       | 25 mm   |

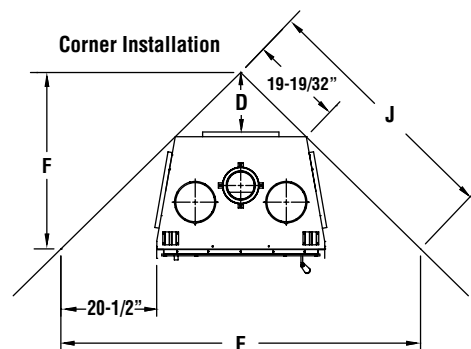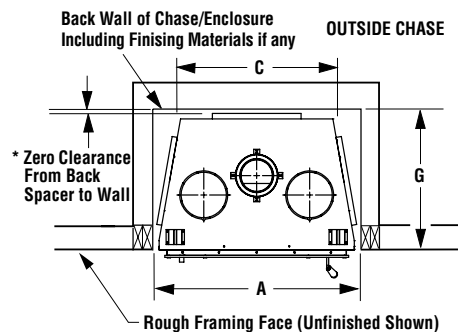


Combustible materials can NOT be used in the space directly above the fireplace. Do not fill the space above the fireplace with any material (Except the wood framing)

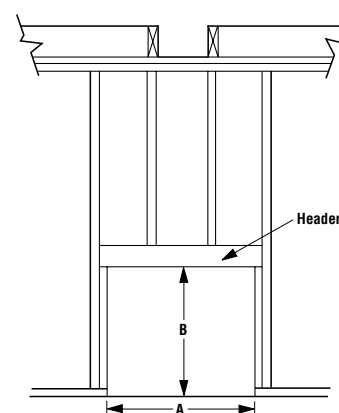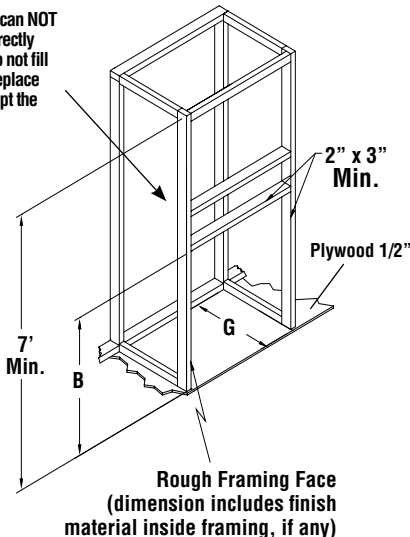

\* Total depth is 25 inches (635mm) including the back spacer minus 1/2 inch (13mm) for drywall to be flush with the facing.

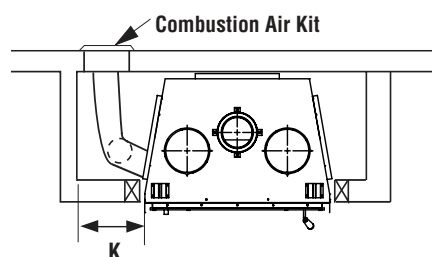

| Notes                                                                                                                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Diagrams, illustrations and photographs are not to scale – consult installation instructions. Product designs, materials, dimensions, specifications, colors and prices are subject to change or discontinuance without notice. |
| All framing dimensions calculated for 1/2" dry wall at the fireplace face. If sheathing the chase or finishing with other thickness materials, calculations will need to be made.                                               |
| * The fireplace must not be in contact with any insulation or loose filling material. Cover the insulation with Drywall panels around the fireplace.                                                                            |

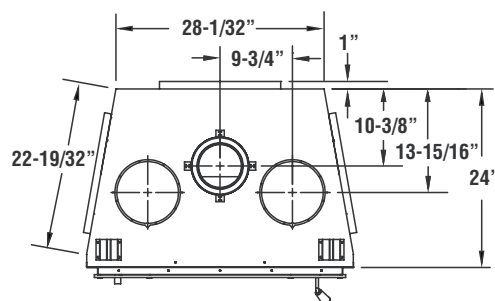

Facing

## IMPORTANT

The facade must be removable once installed. The facade is designed to overlap any facing material installed on the front of the fireplace. If thicker material is installed, use the facade as a template and make sure it can be easily removed for servicing.

1. Combustible material must be installed flush with the fireplace. It may not project in front of and on the fireplace (i.e. the steel facade of the fireplace) (Figure 12).
2. Non-combustible materials such as brick, stone or ceramic tile may project in front of and onto the fireplace facing (Figure 13).

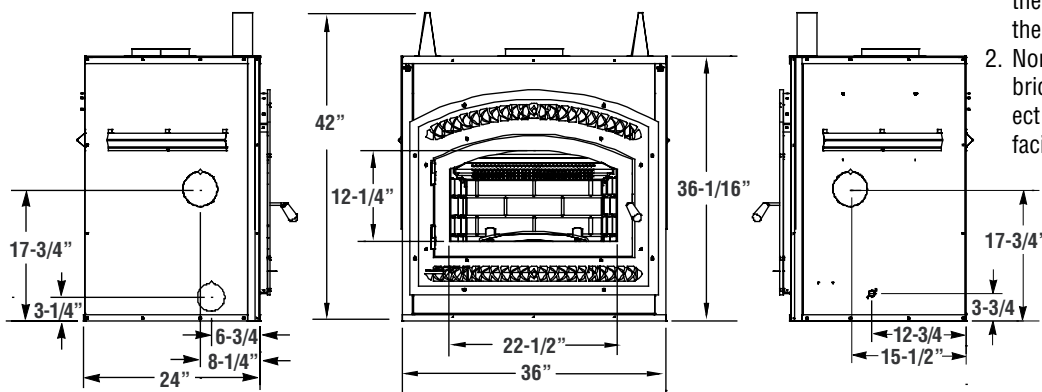


Figure 8 - Framing Dimensions



## INSULATED CHASE CONSTRUCTION

**NOTE:** It is recommended that the chase walls and floor be insulated in the same manner, using the same insulation, as the rest of the building, below the attic.


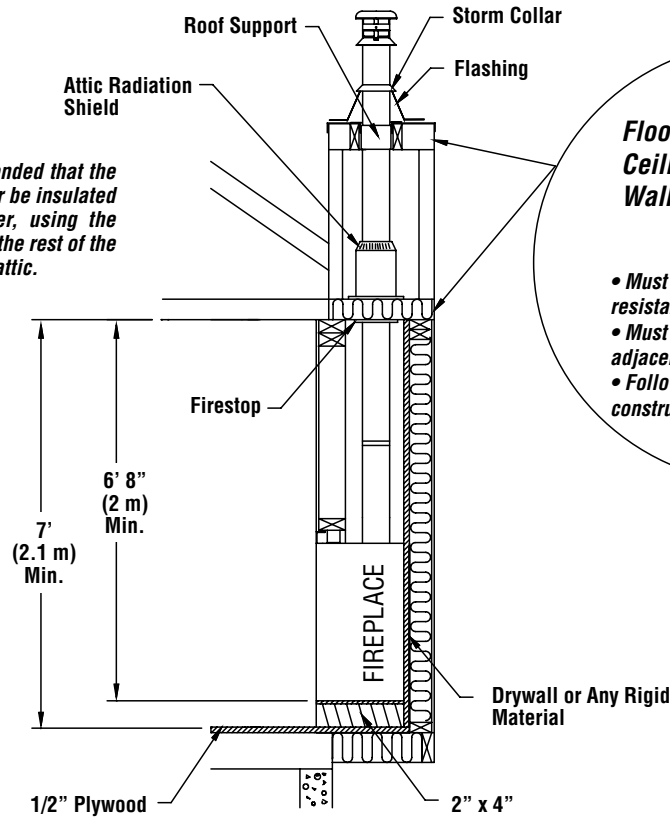


Figure 9


### Floor Ceiling Wall

- Must have the same firestopping resistance as adjacent wall.
- Must have the same insulation as adjacent ceiling.
- Follow local rules regarding framing construction.

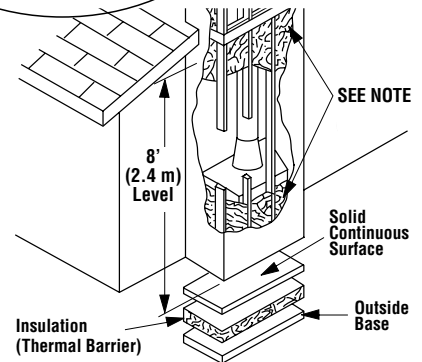

## Nailing Flanges

Four nailing flanges are provided to secure the fireplace to the floor (see figure below). Bend the nailing flanges down so that each flange is flush with the floor, then using nails or screws, secure the fireplace to the floor (2 places each side). The heads of the screws or nails must be large enough to completely cover the holes in the nailing flanges.

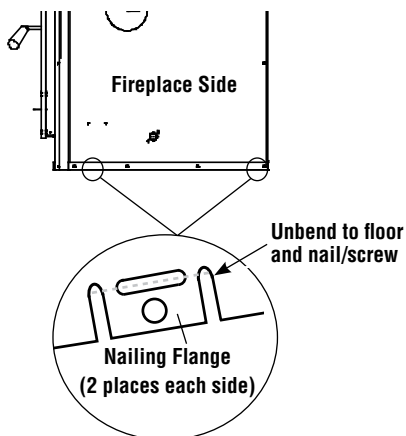

## Mantel and Facing

The mantel must be installed at least 42" (1067 mm) above the base of the fireplace (Figure 11).

### Fireplace Frame Section (Top View)

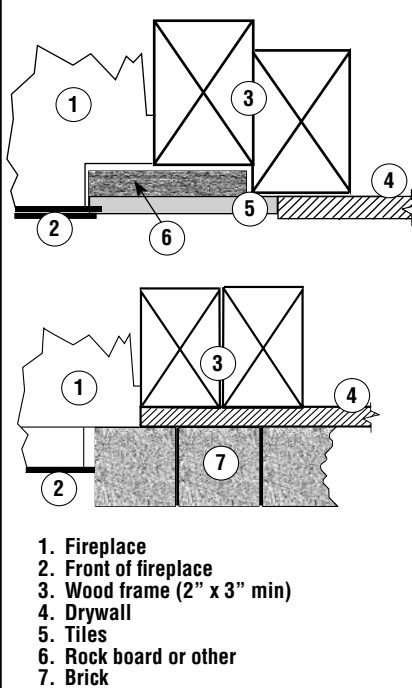


Figure 10

### Mantel and Facing (Side View)



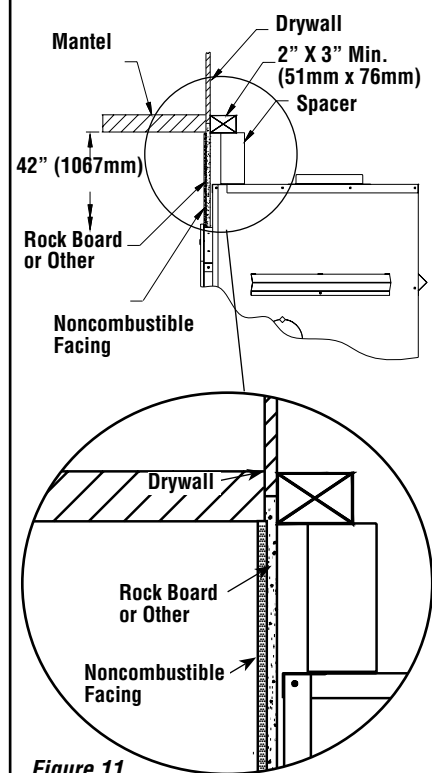


Figure 11

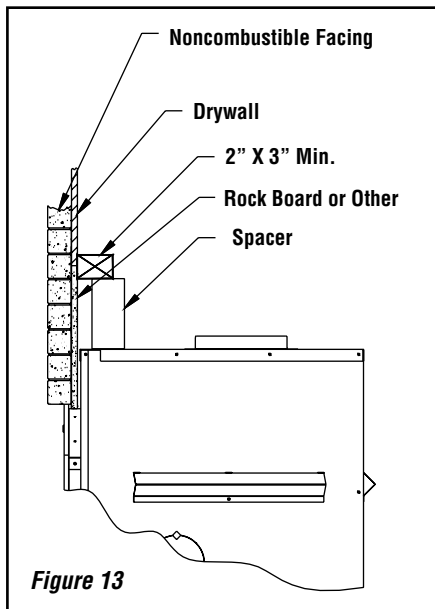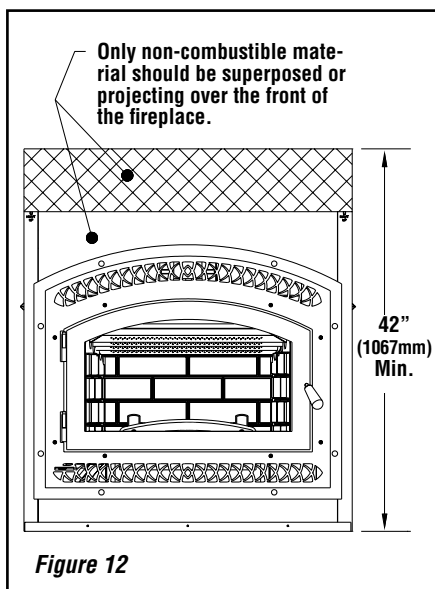

## FIREPLACE BLOWER

The fireplace comes equipped with a heat activated blower. It is located in the bottom of the fireplace, towards the back. It uses 120V and must be connected to the main electrical circuit by a qualified electrician. For connection, use the electrical box supplied with the unit located on the bottom right corner of the fireplace.

If you wish to adjust the blower speed, the variable speed control (VRUW) provided must be installed in line with the wiring. Again, use a qualified electrician for installation.

If the blower requires servicing,

- 1- Remove the doors and decorative facade.
- 2- Remove the screw located below the blower motor that holds it to the back of fireplace.
- 3- Pull the blower out of the unit through the square hole located in the front bottom right corner.

## HOT AIR DUCTING INSTALLATION

The Montecito™ wood burning fireplace is approved for use with a Gravity kit (hot air ducting system).

### Gravity Kit

The gravity kit is designed for double hot air outlets and includes: (See **Figure 14**).

- Two (2) telescopic lengths 8" I.D.
- Two (2) 90° elbows 8" I.D.
- Two (2) hot air outlet kits (grill and frames)
- Two (2) adaptors

See *Gravity Kit Accessories Page 20*.

For safe installation, the gravity kit must meet the following requirements:


**Minimum height\*** 68" (1,727 mm)

**Maximum length** See **Figure 14**


\* The height of the louver must be measured from the base of the Montecito fireplace to the middle point of the louver.

The only blower that can be used with the gravity kit is the one sold with the fireplace.

To extend the double outlet system, it will be necessary to purchase two adjustable lengths (H8951).

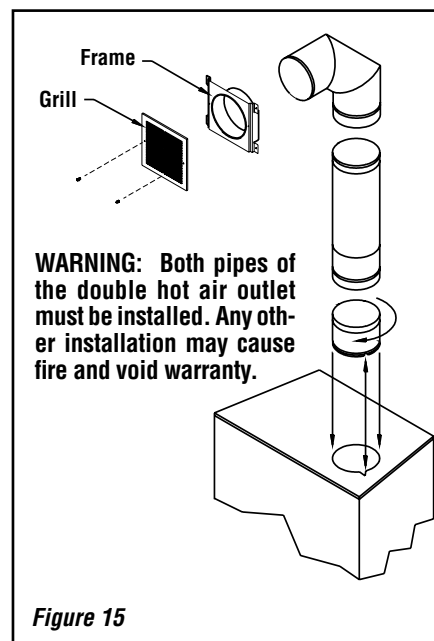

When installing the double outlet system, the hot air outlets can be installed in the same room as the fireplace, or one or both of the outlets can be installed in adjacent or upper rooms. Installing the ducts at different elevations will tend to exhaust more heat out of the higher outlet (**Figure 14**).

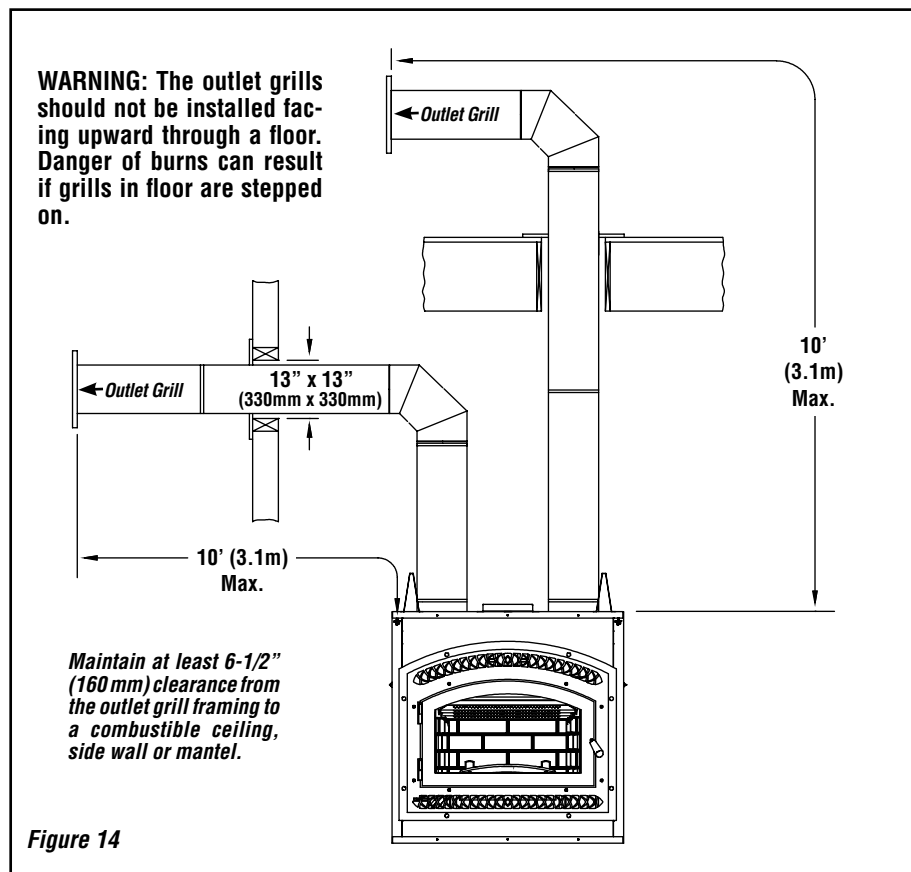

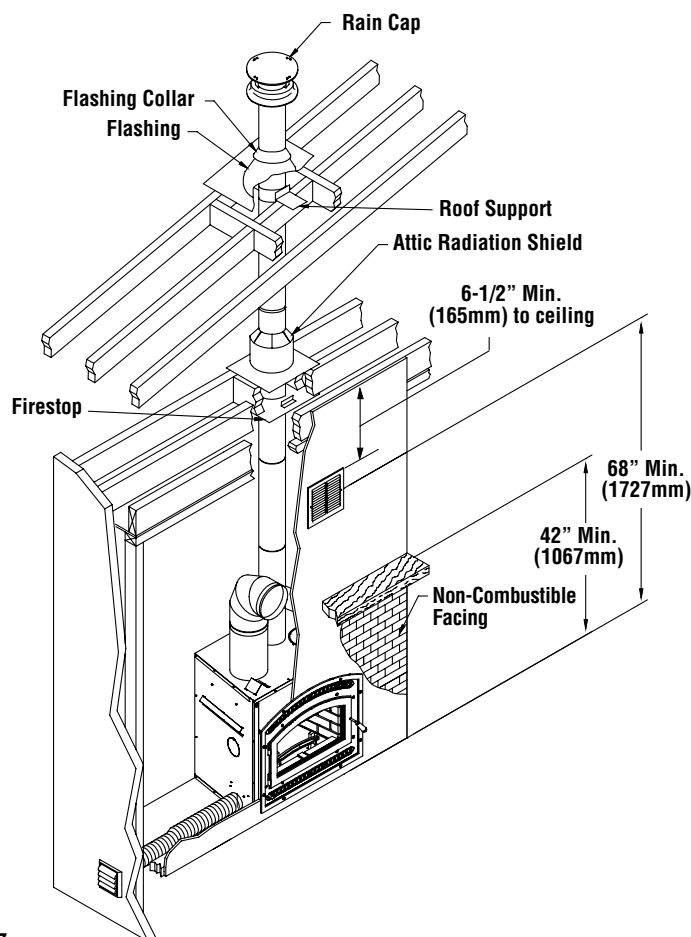


Figure 17

The duct system must be installed respecting the following:

1. Remove the plates closing up the 8" dia. holes on top of the fireplace. Then, cut the insulation in order to obtain two 8" dia. openings. Fix the adaptors on the fireplace openings by turning clockwise (**Figure 15**).
  2. Maintain at least a 2" (50 mm) clearance between the ducts and any combustible material; the required hole size is 13" x 13" (330 mm x 330 mm).
- Exception #1: For the grills, the framing can be 10-3/4" x 10-3/4" (275 mm x 275 mm) to provide the clearance as required by the integral spacers on the double outlet duct system.**
3. The maximum number of elbows in a run of duct is two.
  4. Maintain at least 6-1/2" (160 mm) clearance from the outlet grill framing to a combustible ceiling, side wall or mantel.

5. When traversing a combustible wall or floor, a firestop must be installed at the wall or floor penetration. The hole size must be 13" x 13" (330 mm x 330 mm).
6. Do not connect the hot air ducts to a central heating system. Malfunction of the heating system's blower will cause the fireplace to overheat. A furnace duct is only single wall and not double wall as is required for the Montecito fireplace hot air exhaust.
7. Use only IHP grills and components as described in this manual. Other grills or registers, for example, may be too restrictive and may overheat the fireplace or ceiling.
8. Do not use insulated flexible ducts as they will overheat.
9. Do not use tees or any other components than the ones specifically listed here.
10. Never allow the ducting to pitch down as hot air will be trapped creating a fire hazard. **Never route the ducting downwards.**
11. The hot air outlet grills must be installed with the louvers pointing downwards in order to prevent overheating adjacent ceilings.
12. Always install the two outlet grills when using the double hot air outlet kit.

## OUTSIDE AIR KIT

It is mandatory to install an outside air connection to the Montecito™ wood burning fireplace. The following components are required and are included with the fireplace:

- Outside air kit (includes 4 inch flex that goes up to ten (10) feet long)
- 4" Adaptor for fireplace connection

The outside air assembly must be installed according to the following requirements:



## Outside Air Installation

The outside air assembly may be installed according to the following requirements:

- A) Duct length should be kept to a minimum. The maximum length of a 4" interior diameter (100 mm) insulated flexible duct is twenty (20) feet (6.1 m). (See note below).
- B) The air intake register must not be installed more than ten (10) feet (3050 mm) above the base of the fireplace.
- C) The fresh air must come from outside the house. The air intake must not draw air from the attic, basement or garage.
- D) The air intake should be installed where it is not likely to be blocked by snow or exposed to extreme wind and away from automobile exhaust fumes, gas meters and other vents.
- E) The duct and register may be installed above or below floor level.

Make a 4-1/4" (110 mm) hole in the outside wall of the house at the chosen location. From outside, place the outside air register in the hole (open side down) and fasten the register to the wall with screws as shown (see **Figure 18**). Slip the pipe into the insulated sleeve. Place the insulated pipe over the register tube and over the fireplace's outside air connector (see **Figure 19**). At each end, carefully pull back the insulation and plastic cover exposing the flexible pipe. Using the aluminium tape provided, wrap the tape around the joint between the flexible pipe and the air inlets. Carefully push the insulation and plastic cover back over the pipe. Using aluminium tape, fasten the plastic cover in place.

**NOTE:** We recommend not to exceed twenty (20) feet of 4" flexible pipe. If you require a longer length we recommend that you use a 5" diameter flexible pipe for the complete run up to thirty (30) feet and a 6" diameter pipe for a run of up to forty (40) feet.

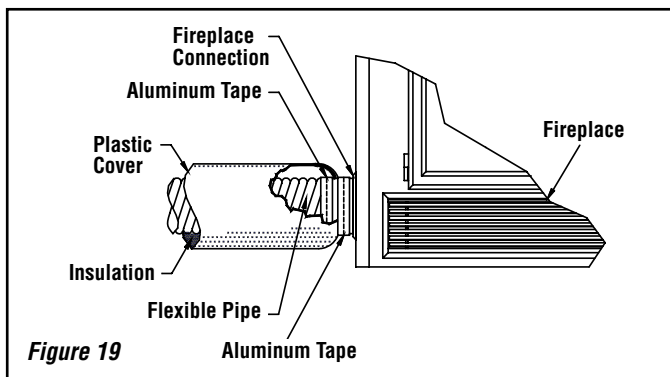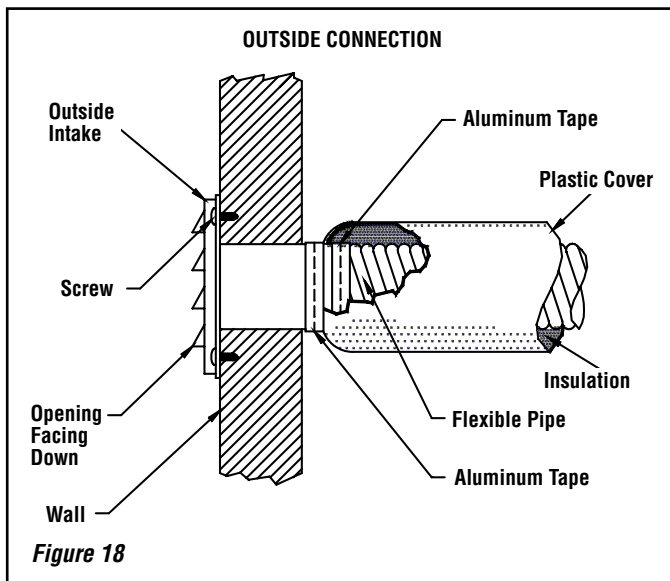


## THE CHIMNEY SYSTEM

### Chimney Installation Notes

1. If possible, install an interior chimney as it will provide better performance. In areas with continuous temperatures below  $-18^{\circ}\text{C}$  ( $0^{\circ}\text{F}$ ), the use of an exterior chimney increases the likelihood of operating problems such as low draft, high rate of creosoting, and poor start-up characteristics. Exterior chimneys are also prone to down-with dry and flow reversal. Installations, which are located on lower floors in the house, such as in a basement, in combination with outside chimney, are especially prone to flow reversal.
2. The IHP fireplace model Montecito may be installed only with Security Chimneys International 6" diameter chimney systems.
3. A chimney venting a fireplace shall not vent any other appliance.
4. The minimum chimney height is twelve (12) feet (3.7 m). In altitude, add 18" (450 mm) to the chimney for every 2,000 feet (600 m) above sea level.

5. **All chimney installations must include at least one support.** Reducing the amount of chimney weight on the fireplace will help avoid the noise created when the fireplace expands. This can be achieved by having the chimney supported by the supports. The maximum chimney length that can be supported by the fireplace is nine (9) feet (2.75 m) for S-2100+\*/HT6000+\*, twelve (12) feet (3.7 m) for ASHT+\*/HT6103+\* and 26 feet (8 m) for AC\* chimney.
6. The chimney must extend at least three (3) feet (915 mm) above its point of contact with the roof and at least two (2) feet (610 mm) higher than any wall, roof or building within ten (10) feet (3m) of it (**Figure 20**).
7. If the chimney extends higher than five (5) feet (1,500 mm) above its point of contact with the roof, it must be secured using a roof brace.
8. A rain cap must be installed on top of the chimney. Failure to install a rain cap may cause corrosion problems.
9. Cut and frame square holes in all floors, ceilings, and roof that the chimney will go through to provide a 2" (50 mm) clearance between the chimney and any combustible materials. Do not fill this 2" space with insulation or any other combustible material.
10. Portions of the chimney which may extend through accessible spaces must be enclosed to avoid contact with combustible materials or damage to the chimney.
11. When offsets are used, the pipe may not penetrate a ceiling or floor unless it is running vertical (no  $30^{\circ}$  offsets).

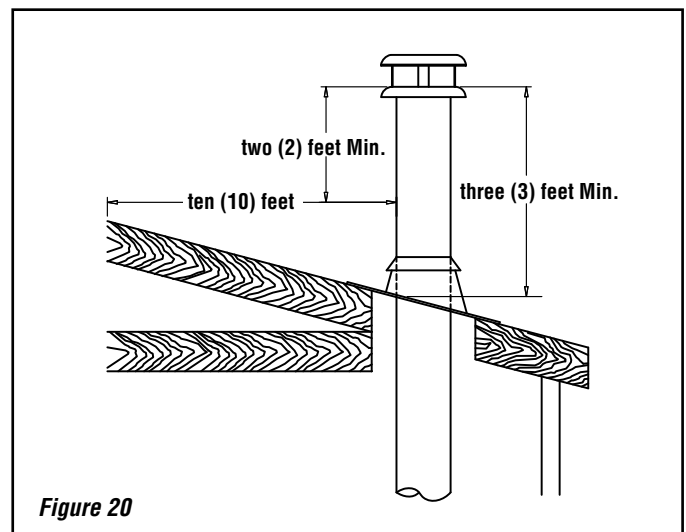

**NOTE:** 2" clearance to combustibles around chimney components required.

**NOTE:** Blown or fill type insulation materials must not be in contact with the fireplace or in the enclosure frame as described in "Enclosure" section.

**NOTE:** Local codes may not require firestopping at the ceiling levels for outside chase installations. However, it is recommended for safety and the reduction of heat loss.




## CHIMNEY INSTALLATION INSTRUCTIONS




1. Cut and frame the holes in the ceiling, floor and roof where the chimney will pass (see **Figure 21**). Use a plumb-bob to line up the center of the holes. The sizes are indicated in **Table 2** for the floor and ceiling holes and **Table 3 (Page 15)** for the roof holes.

| CHIMNEY MODEL      | SQUARE HOLE SIZE OPENING |
|--------------------|--------------------------|
| ASHT+ / HT6103+ *  | 12-3/8" (314 mm)         |
| S-2100+ / HT6000+* | 14-1/8" (359 mm)         |
| AC *               | 15 in (380 mm)           |

**NOTE: See Table 3 for Sloped Roof Framing  
Table 2 - Flat Roof Framing**

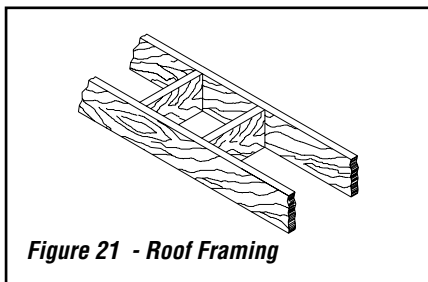

2. From below, install a firestop in each ceiling/floor separation through which the chimney will pass. At the attic level, install an attic radiation shield from above (**Figures 22a and 22b**).
3. For ASHT+\* / HT6103+\* and S2100+\* / HT6000+\* chimneys place the first chimney length on the fireplace. To lock it in place, turn 1/4 of a turn clockwise. With the AC\* chimney, you must use a starter section before installing the first chimney length (**Figure 23**). Continue installing chimney lengths making sure to lock each length in place.
4. Every time the chimney passes through a ceiling or a wall, install the appropriate firestop. When you reach the desired height, install the roof support. When installing a support, slightly lift the chimney system so the weight will lie on the support, not on the fireplace to reduce expansion noises (refer to instructions included with the support).
5. Then, put the roof flashing in place and seal the joint between the roof and the flashing with roofing pitch (see **Figures 24 and 25**). For sloping roofs, place the flashing under the upper shingles and on top of the lower shingles. Nail the flashing to the roof, using roofing nails.
6. Place the spacers and the storm collar over the flashing, and tighten it with the bolt supplied. Finally, seal the joint between the storm collar and the chimney, using silicone caulking.
7. Install the chimney cap. Once the chimney cap is in place, the roof flashing can be washed with a solvent or vinegar and then painted with rust-proof paint.

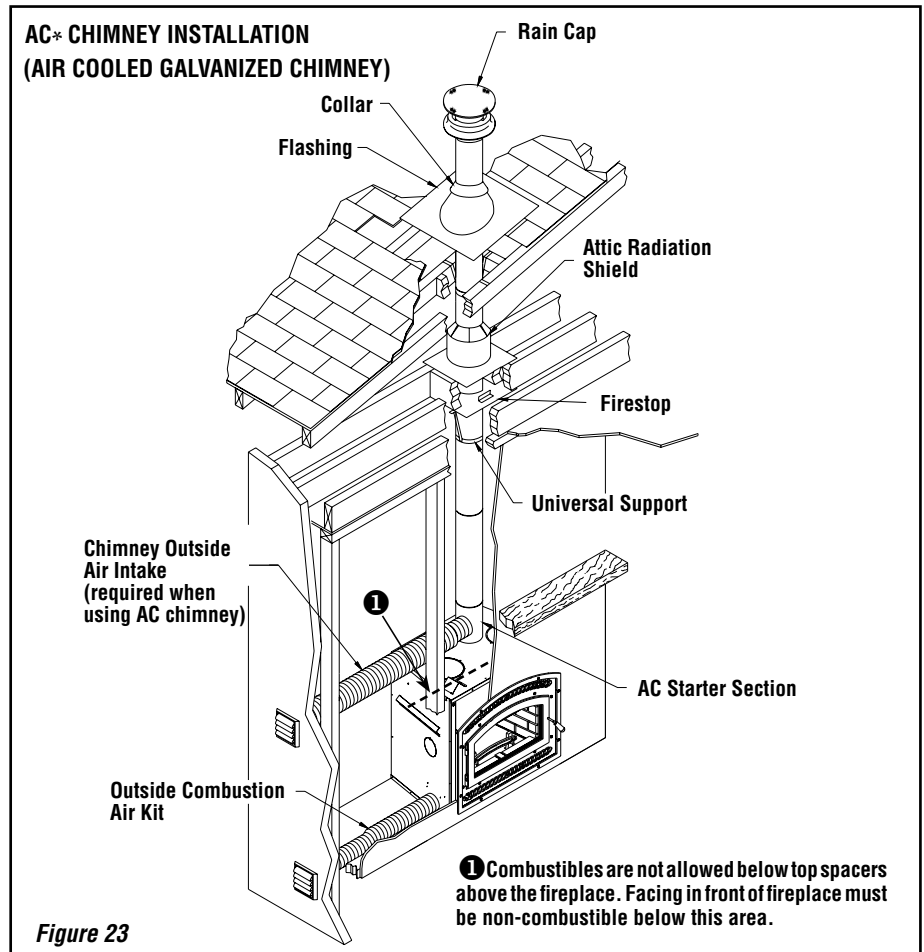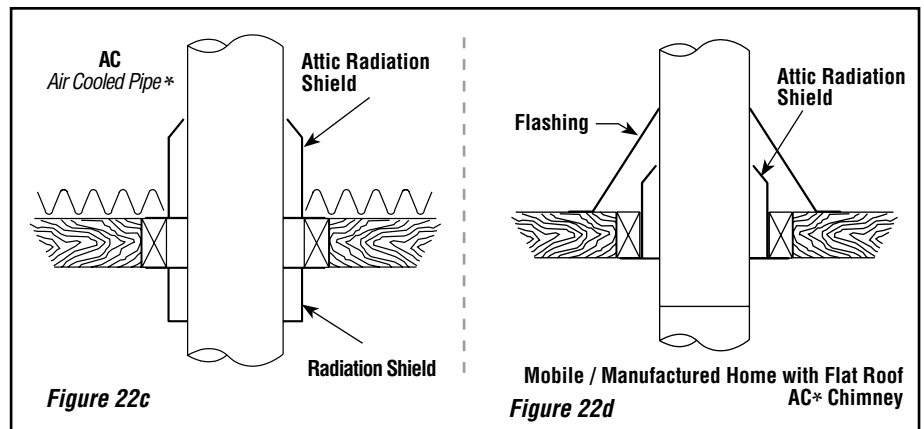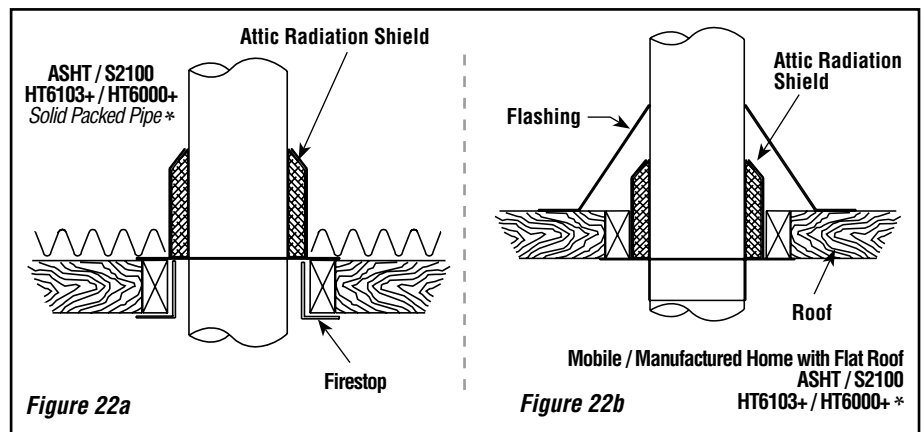

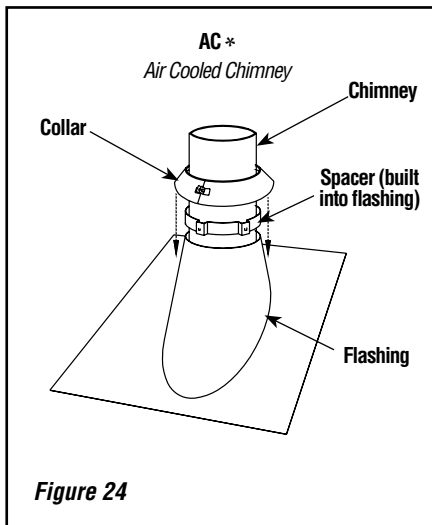


Figure 24

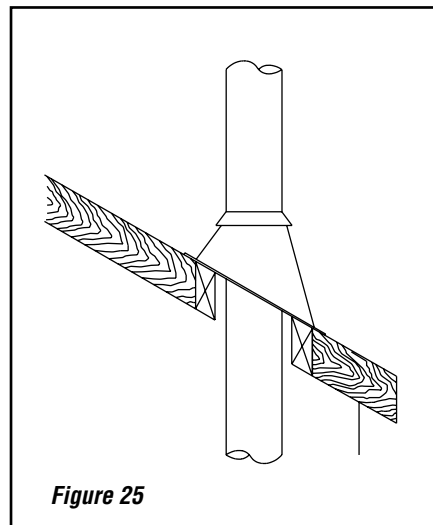


Figure 25

| Roof Down Slope Hole Size |                   |                     |                  |
|---------------------------|-------------------|---------------------|------------------|
| SLOPE                     | ASHT+* / HT6103+* | S-2100+* / HT6000+* | AC*              |
| Roof Pitch                | 6"                | 6"                  | 6"               |
| 0 *                       | 12-3/8" (314 mm)  | 14-1/8" (359 mm)    | 15" (380 mm)     |
| 2/12                      | 12-9/16" (319 mm) | 14-3/8" (365 mm)    | 15 3/8" (390 mm) |
| 4/12                      | 13" (330 mm)      | 14-7/8" (378 mm)    | 16 1/8" (410 mm) |
| 6/12                      | 13-7/8" (352 mm)  | 15-3/4" (400 mm)    | 16 7/8" (430 mm) |
| 8/12                      | 14-7/8" (378 mm)  | 17" (432 mm)        | 18 1/4" (465 mm) |
| 10/12                     | 16-1/8" (410 mm)  | 18-3/8" (467 mm)    | 19 5/8" (500 mm) |
| 12/12                     | 17-1/2" (445 mm)  | 20" (508 mm)        | 21 3/8" (545 mm) |

\* Cross Slope Hole Size  
Put the chimney cap into place.  
Wash the roof flashing with a solvent or vinegar, then paint it with rust-proof paint.

Table 3

## OFFSET CHIMNEY INSTALLATION

After reaching the location requiring the elbow, proceed as follows. The minimum chimney height when using elbows is:

| Minimum Chimney Height Using Elbows |                                         |
|-------------------------------------|-----------------------------------------|
| Fireplace Model                     | MONTE                                   |
| Chimney Model *                     | ASHT+ / S2100+ / HT6103+ / HT6000+ / AC |
| Vertical installation               | 12 feet (3.66 m)                        |
| Two (2) elbows                      | 15 feet (4.57 m)                        |
| Four (4) elbows                     | 17 feet (5.18 m)                        |

Table 4

### NOTES:

- Must return to vertical before penetrating ceiling or floor.
- A maximum of 2 offsets are allowed.

After reaching the location requiring the elbow, proceed as follows:

### ASHT+ / HT6103+ / S-2100+ / HT6000+ Chimneys \*


1. Install the first elbow; turn it in the required direction. Fasten it to the chimney with the three (3) 1/2" (12 mm) metal screws provided with the elbow.
2. Install the necessary chimney lengths to achieve the required offset. Lock the chimney lengths together: it is recommended to use three (3) 1/2" (12 mm) screws. If the offset length is made of two (2) chimney lengths or more, use an offset or roof support halfway up the offset. If penetrating a wall, install a wall radiation shield (see **Figures 27 and 29**).
3. Use another elbow to turn the chimney vertically. Secure the elbow, using three (3) 1/2" (12 mm) screws (provided with the elbow).
4. Use a plumb-bob to line up the center of the hole. Cut a hole for the chimney in the ceiling/floor. Frame this hole as described previously (refer to section *Chimney Installation Instructions*).
5. From below, install a firestop (See **Figure 22a**).
6. A support (ST\* or SO\*) must be used on the first 15' section (5 m).
7. Continue with the regular installation.

### AC Chimney \*

1. Install the first elbow. Turn it in the required direction. To lock it in place, turn 1/8 of a turn. Fasten the straps attached to the elbow to the surrounding frame, using nails or drywall screws (see **Figure 27**).
2. Install the necessary chimney lengths to achieve the required offset. Lock the chimney lengths together. If penetrating a wall, use a wall radiation shield.
3. Use another elbow to turn the chimney vertically. Lock it to the chimney. Fasten the straps attached to the elbow to the surrounding framing using nails or drywall screws.
4. Use a plumb-bob to line up the center of the hole. Cut a hole for the chimney in the ceiling. Frame this hole as described previously.
5. From below, install a firestop (see **Figure 22c**).
6. Continue with the regular installation.

**NOTE:** When using AC\* chimney, an AC6SB\* (H3779\*) starter section must be used before installing an elbow. When an offset is needed immediately off the top of the fireplace, an elbow starter section, AC6SB30\* (H3780\*), is available.

### Offset Dimensions

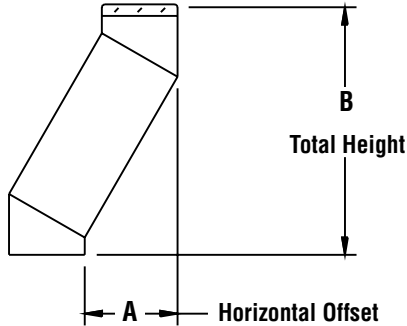

| Chimney<br>6" *                                      | Elbow | Offset &<br>Height | One Length Between Elbows |                     |                      |                     |                     |                       | Two Lengths Between Elbows |                       |                      |                      |                       |                       |
|------------------------------------------------------|-------|--------------------|---------------------------|---------------------|----------------------|---------------------|---------------------|-----------------------|----------------------------|-----------------------|----------------------|----------------------|-----------------------|-----------------------|
|                                                      |       |                    | 8"                        | 12"                 | 18"                  | 24"                 | 36"                 | 48"                   | 8" & 48"                   | 12" & 48"             | 18" & 48"            | 24" & 48"            | 36" & 48"             | 48" & 48"             |
| Secure<br>Temp®<br>ASHT<br><br>Nova Temp®<br>HT6103+ | 15°   | A                  | 3-5/16"<br>(84mm)         | 4-5/16"<br>(110mm)  | 5-7/8"<br>(149mm)    | 7-7/16"<br>(189mm)  | 10-1/2"<br>(267mm)  | 13-5/8"<br>(346mm)    | 15-3/8"<br>(391mm)         | 16-7/16"<br>(418mm)   | 18"<br>(457mm)       | 19-1/2"<br>(495mm)   | 22-5/8"<br>(575mm)    | 25-3/4"<br>(654mm)    |
|                                                      |       | B                  | 15-11/16"<br>(398mm)      | 19-9/16"<br>(497mm) | 25-3/8"<br>(645mm)   | 31-3/16"<br>(792mm) | 42-3/4"<br>(1086mm) | 54-3/8"<br>(1381mm)   | 60-15/16"<br>(1548mm)      | 64-13/16"<br>(1646mm) | 70-9/16"<br>(1792mm) | 76-3/8"<br>(1940mm)  | 87"<br>(2210mm)       | 99-9/16"<br>(2529mm)  |
|                                                      | 30°   | A                  | 7-7/16"<br>(189mm)        | 9-7/16"<br>(240mm)  | 12-7/16"<br>(316mm)  | 15-7/16"<br>(392mm) | 21-7/16"<br>(545mm) | 27-7/16"<br>(697mm)   | 30-13/16"<br>(783mm)       | 32-13/16"<br>(833mm)  | 35-13/16"<br>(910mm) | 38-13/16"<br>(986mm) | 44-13/16"<br>(1138mm) | 50-13/16"<br>(1291mm) |
|                                                      |       | B                  | 20"<br>(508mm)            | 23-1/2"<br>(597mm)  | 28-11/16"<br>(729mm) | 33-7/8"<br>(860mm)  | 44-1/4"<br>(1124mm) | 54-11/16"<br>(1389mm) | 60-9/16"<br>(1538mm)       | 64"<br>(1627mm)       | 69-1/4"<br>(1759mm)  | 74-7/16"<br>(1891mm) | 84-13/16"<br>(2154mm) | 95-1/4"<br>(2419mm)   |
|                                                      | 45°   | A                  | 10-5/16"<br>(262mm)       | 13-3/16"<br>(335mm) | 17-3/8"<br>(441mm)   | 21-5/8"<br>(549mm)  | 30-1/8"<br>(765mm)  | 38-5/8"<br>(981mm)    | 43-7/16"<br>(113mm)        | 46-1/4"<br>(1175mm)   | 50-1/2"<br>(1283mm)  | 54-3/4"<br>(1391mm)  | 63-1/4"<br>(1607mm)   | 71-11/16"<br>(1818mm) |
|                                                      |       | B                  | 17-13/16"<br>(452mm)      | 20-5/8"<br>(524mm)  | 24-7/8"<br>(632mm)   | 29-1/8"<br>(740mm)  | 37-5/8"<br>(956mm)  | 46-1/8"<br>(1172mm)   | 50-15/16"<br>(1294mm)      | 53-3/4"<br>(1365mm)   | 58"<br>(1473mm)      | 62-1/4"<br>(1581mm)  | 70-3/4"<br>(1797mm)   | 79-3/16"<br>(2011mm)  |


| Chimney<br>6" *                                     | Elbow | Offset &<br>Height | One Length Between Elbows |                     |                      |                     |                       |                      | Two Lengths Between Elbows |                     |                      |                     |                     |                       |
|-----------------------------------------------------|-------|--------------------|---------------------------|---------------------|----------------------|---------------------|-----------------------|----------------------|----------------------------|---------------------|----------------------|---------------------|---------------------|-----------------------|
|                                                     |       |                    | 8"                        | 12"                 | 18"                  | 24"                 | 36"                   | 48"                  | 8" & 48"                   | 12" & 48"           | 18" & 48"            | 24" & 48"           | 36" & 48"           | 48" & 48"             |
| Secure<br>Temp<br>S2100+<br><br>Nova Temp<br>HT6000 | 15°   | A                  | 3-5/16"<br>(84mm)         | 4-5/16"<br>(110mm)  | 5-7/8"<br>(149mm)    | 7-7/16"<br>(189mm)  | 10-1/2"<br>(267mm)    | 13-5/8"<br>(346mm)   | 15-1/2"<br>(394mm)         | 16-1/2"<br>(419mm)  | 18-1/16"<br>(459mm)  | 19-5/8"<br>(498mm)  | 22-3/4"<br>(578mm)  | 25-13/16"<br>(656mm)  |
|                                                     |       | B                  | 16"<br>(406mm)            | 19-7/8"<br>(505mm)  | 25-11/16"<br>(652mm) | 31-1/2"<br>(800mm)  | 43-1/16"<br>(1094mm)  | 54-5/8"<br>(1387mm)  | 61-7/16"<br>(1561mm)       | 65-1/4"<br>(1657mm) | 71-1/16"<br>(1805mm) | 76-7/8"<br>(1953mm) | 88-1/2"<br>(2248mm) | 100-1/16"<br>(2542mm) |
|                                                     | 30°   | A                  | 7-3/8"<br>(187mm)         | 9-3/8"<br>(238mm)   | 12-3/8"<br>(314mm)   | 15-3/8"<br>(391mm)  | 21-3/8"<br>(543mm)    | 27-3/8"<br>(695mm)   | 30-7/8"<br>(784mm)         | 32-7/8"<br>(835mm)  | 35-7/8"<br>(911mm)   | 38-7/8"<br>(987mm)  | 44-7/8"<br>(1140mm) | 50-7/8"<br>(1292mm)   |
|                                                     |       | B                  | 20-11/16"<br>(525mm)      | 24-3/16"<br>(614mm) | 29-3/8"<br>(746mm)   | 34-9/16"<br>(878mm) | 44-15/16"<br>(1141mm) | 55-5/16"<br>(1405mm) | 61-3/8"<br>(1559mm)        | 64-7/8"<br>(1648mm) | 70-1/16"<br>(1780mm) | 75-1/4"<br>(1911mm) | 85-5/8"<br>(2175mm) | 96"<br>(2438mm)       |

| Chimney<br>6" * | Elbow | Offset &<br>Height | One Length Between Elbows |                       |                     |     |                      |                      | Two Lengths Between Elbows |                      |                       |     |                      |                       |
|-----------------|-------|--------------------|---------------------------|-----------------------|---------------------|-----|----------------------|----------------------|----------------------------|----------------------|-----------------------|-----|----------------------|-----------------------|
|                 |       |                    | ---                       | 12"                   | 18"                 | --- | 36"                  | 48"                  | ---                        | 12" & 48"            | 18" & 48"             | --- | 36" & 48"            | 48" & 48"             |
| AC<br>6"        | 15°   | A                  | ---                       | 4-13/16"<br>(122 mm)  | 6-1/8"<br>(156 mm)  | --- | 11"<br>(280 mm)      | 14-1/8"<br>(359 mm)  | ---                        | 16-7/8"<br>(429 mm)  | 18-7/16"<br>(468 mm)  | --- | 23"<br>(584 mm)      | 26-3/16"<br>(665 mm)  |
|                 |       | B                  | ---                       | 27-11/16"<br>(703 mm) | 33-1/2"<br>(851 mm) | --- | 50-7/8"<br>(1292 mm) | 62-1/2"<br>(1588 mm) | ---                        | 72-5/8"<br>(1845 mm) | 78-7/16"<br>(1992 mm) | --- | 95-3/4"<br>(2432 mm) | 107-3/8"<br>(2727 mm) |
|                 | 30°   | A                  | ---                       | 9-3/8"<br>(238 mm)    | 12-3/8"<br>(314 mm) | --- | 21-3/8"<br>(543)     | 27-3/8"<br>(695 mm)  | ---                        | 32-5/8"<br>(829 mm)  | 35-5/8"<br>(905 mm)   | --- | 44-5/8"<br>(1134 mm) | 50-5/8"<br>(1286 mm)  |
|                 |       | B                  | ---                       | 25-3/4"<br>(654 mm)   | 31"<br>(787 mm)     | --- | 46-1/2"<br>(1181 mm) | 57"<br>(1448 mm)     | ---                        | 66"<br>(1676 mm)     | 71-1/4"<br>(1810 mm)  | --- | 86-7/8"<br>(2207 mm) | 97-1/4"<br>(2740 mm)  |

**NOTE:** With the AC\* chimney, a starting length of 6" high must be used on top of the fireplace before installing an elbow.

Figure 26

### OFFSET CHIMNEY INSTALLATION \*

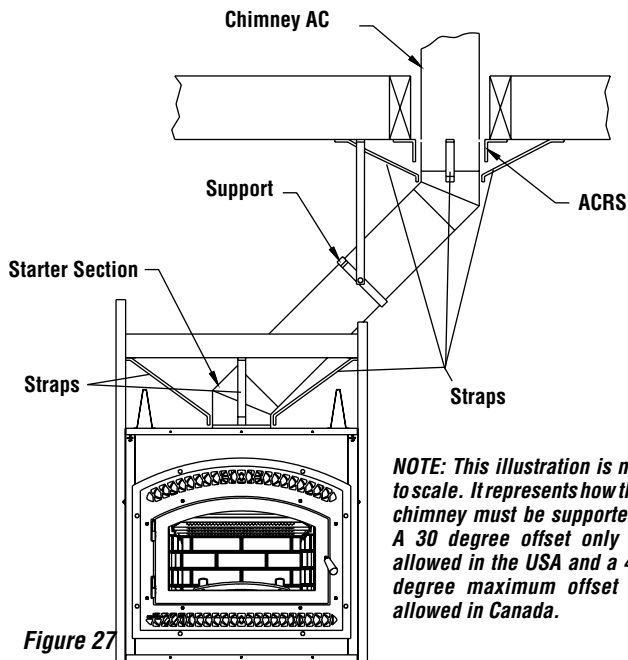

### ANGLED WALL RADIATION SHIELD \* (RSM+ and RSMI30)

When traversing a combustible wall with the chimney at a 30° or 45° angle, an angled firestop or wall radiation shield must be installed. Only one is required.



**NOTE: 45° angle for Canada only (RSMI45\*)**

In cold climate locations (climates where temperatures will fall below 32° F / 0° C), we recommend that you use the insulated wall radiation shield since it will maintain the home's thermal barrier.

| RSM+ and RSMI30<br>(RSMI45 - Canada Only) |       |                                       |
|-------------------------------------------|-------|---------------------------------------|
| Chimney Model *                           | Angle | Hole Size                             |
| ASHT+ / HT6103+<br>(6" dia). Canada only  | 30°   | 283 mm x 781 mm (11-1/8" x 30-3/4")   |
|                                           | 45°   | 283 mm x 518 mm (11-1/8" x 20-3/8")   |
| S-2100+ / HT6000+ /<br>AC (6" dia).       | 30°   | 327 mm x 881 mm (12-7/8" x 34-11/16") |
|                                           | 30°   | 380 mm x 972 mm (15" x 38-1/4")       |

Table 5

### OFFSET CHIMNEY INSTALLATION WITH WALL PENETRATION

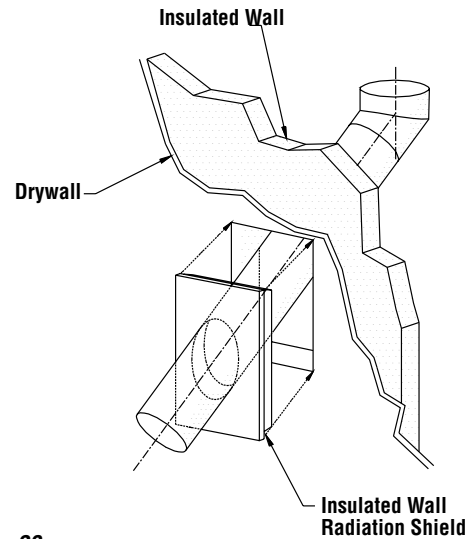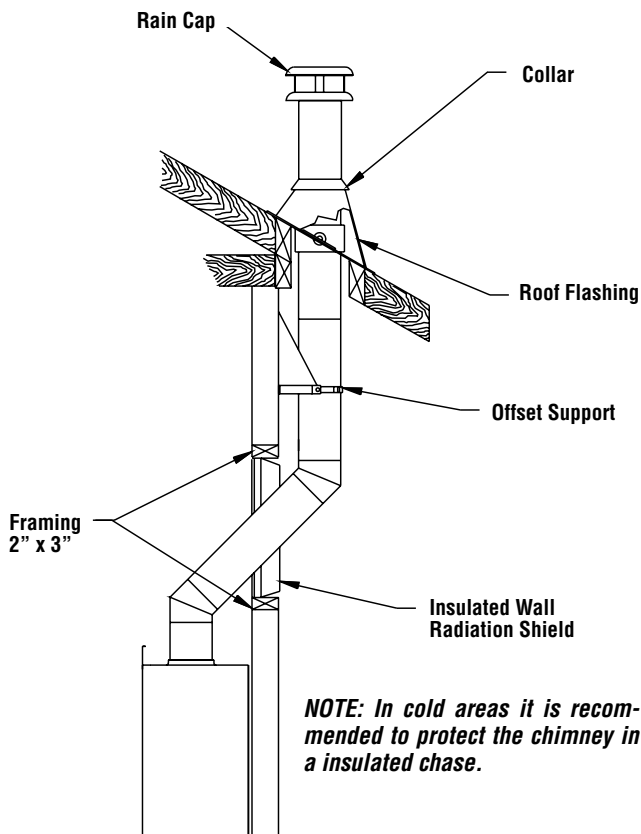



## GLASS CARE

### Glass Replacement

The glass used for the Montecito™ fireplace is a high temperature ceramic glass (1,400° F / 760° C). If the glass breaks, it must be replaced with an identical ceramic glass. Tempered glass or ordinary glass will not withstand the high temperatures of the Montecito fireplace. Replacement glass should be purchased from a IHP dealer (see "Replacement Parts", **Page 23**). **DO NOT OPERATE THE UNIT WITH CRACKED OR BROKEN GLASS.**

### Glass Cleaning

The Montecito fireplace is designed to keep the glass clean under normal operating conditions. If the Montecito fireplace is operated continuously with the combustion air controls closed, the glass will tend to get dirty unless the fuel, firebox and glass are maintained at hot temperatures (see "Refueling For Best Performance"). To clean the glass, there are a number of specially designed cleaners. Your authorized IHP dealer can recommend a suitable cleaner which is available in your area. Regular household glass cleaners will not clean creosote. Do not use abrasives such as steel pads, steel wool or oven cleaner as they will scratch the glass.

**DO NOT USE CHEMICAL GLASS CLEANERS ON PAINTED SURFACES AS IT MAY CAUSE THE PAINT TO PEEL.**

**CAUTION: DO NOT ALLOW WINDOW CLEANER TO GET IN CONTACT WITH DOOR GASKET OR PAINT ON FACADE OR DOOR. ONCE CLOSED, CONTACT OF GLASS CLEANER WITH THE FIREPLACE FACADE CAN PROVOKE PAINT PEELING OFF.**

### Gasket Replacement

Remove the door from the unit (see **Page 6**) and lay it on a clean unabrasive surface. To replace the gasket, first remove all of the old gasket and gasket cement. Make sure that the surface is totally clean before applying new cement (a high temperature silicone caulking rated at 500° F [260° C], is suitable) or adhesion problems may result. Apply gasket cement to the gasket channel and install the new gasket. This replacement part is available from your IHP dealer in the following dimensions:

| Gasket               | Length       | Dimensions             | Part No.   |
|----------------------|--------------|------------------------|------------|
| <b>Steel Door</b>    |              |                        |            |
| <b>Around Glass</b>  | 69<br>(1753) | 1 x 3/16<br>(25 x 4.8) | PR-SR1685D |
| <b>On Door Frame</b> | 73<br>(1854) | 5/8 dia.<br>(15.9)     | PR-SR1823G |
| <b>Cast Door</b>     |              |                        |            |
| <b>Around Glass</b>  | 69<br>(1753) | 1 x 5/16<br>(25 x 4.8) | PR-SR1823H |
| <b>On Door Frame</b> | 73<br>(1854) | 5/8 dia.<br>(15.9)     | PR-SR1823G |

**Table 1** Inches (millimeters)

## FIREPLACE INSTALLATION

### Locating The Montecito Fireplace

The best location to install your fireplace is determined by considering the location of windows, doors, and the traffic flow in the room where the fireplace is located, allowing space in front of the unit for the hearth extension and the mantel, and taking into consideration the location of the hot air ducts (optional), outside air kit and chimney.


If possible, you should choose a location where the chimney will pass through the house without cutting floor or roof joists (see fireplace dimensions **Page 9**).

Usually, no additional floor support is needed for the fireplace. The adequacy of the floor can be checked by first estimating the weight of the fireplace system. Weights are given on **Page 23**. Note the floor construction and consult your local building code to determine if additional support is needed.

The Montecito fireplace may be installed directly on the floor or on a raised base (for proper guidelines, refer to "Hearth Extension Requirements") and a minimum of 6'8" (2 m) measured from the base of the appliance to the ceiling is required.

When selecting the location, the chimney outlet position and the direction of the wind are important factor affecting the chimney performance. To allow a maximum draft and to reduce wind turbulence, the chimney must:

- Penetrate the highest part of the roof.
- Be installed as far as possible of roof offsets, trees or any other obstructions that may cause wind turbulence and back drafts in the chimney.
- The least amount of offsets (elbows) possible. **NOTE:** A maximum of 2 offsets is allowed.

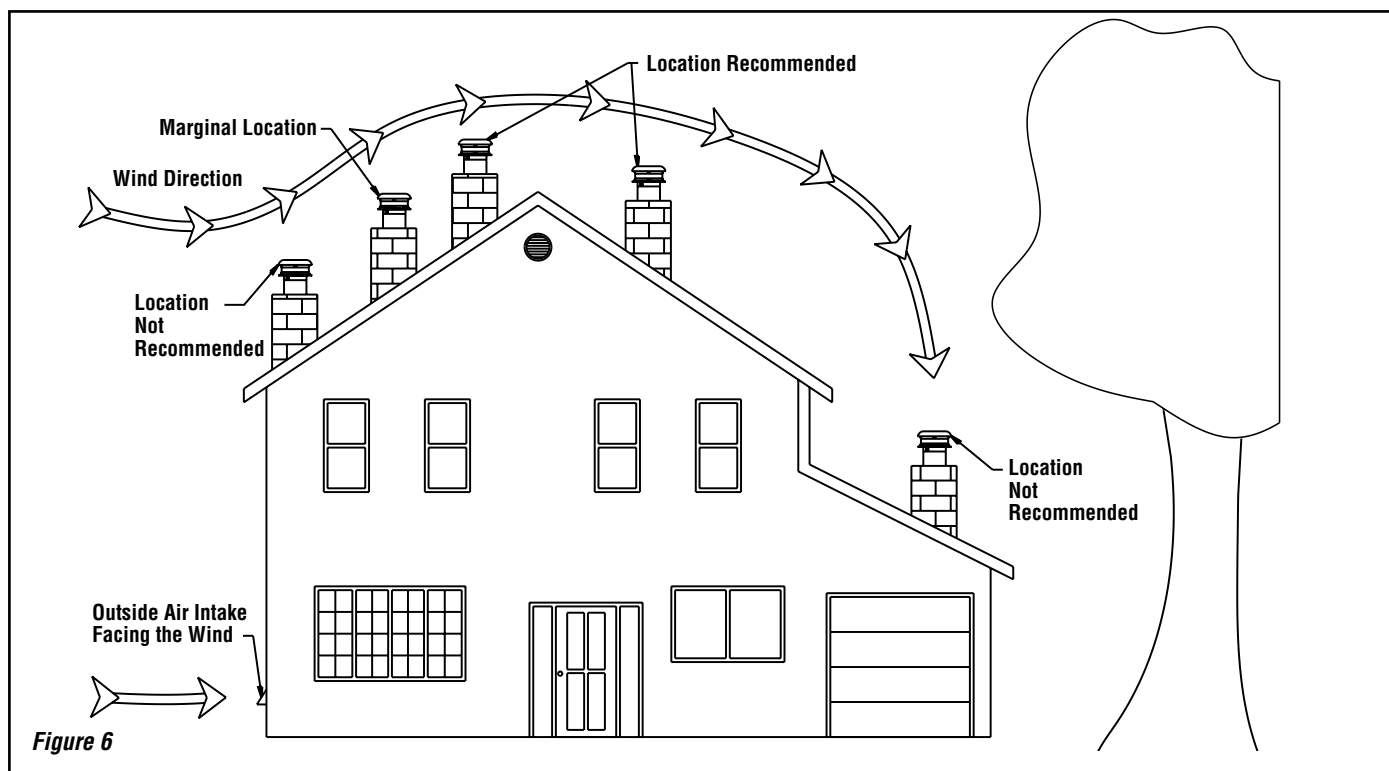

**Figure 6**

CHIMNEY SUPPORT INSTALLATION

Universal Roof Support

- This support has three possible uses:
- 1. For ASHT+\* / HT6103+\* and S-2100+\* / HT6000+\*, it must be used on a roof to support the chimney.
  - 2. It may be used on a floor, ceiling or roof above an offset to support the chimney above the offset.
  - 3. It may be used on a floor, ceiling or roof as a supplementary support.

Table 6 gives maximum height of supported chimney.

**NOTE:** For the AC\* chimney, a support section must be used every forty (40) feet (12 m) instead of the universal roof support (ST).

For roof support installation, refer to the instructions provided with the support.

UNIVERSAL OFFSET SUPPORT INSTALLATION

This support is used to support the chimney above an offset. When the chimney offset is used to traverse a wall this support may be used on the wall to support the chimney. The maximum heights are given in Table 6. For offset support installation, refer to the instructions provided with the support.

| CHIMNEY MODEL *             | MAXIMUM HEIGHT OF SUPPORTED CHIMNEY |                   |
|-----------------------------|-------------------------------------|-------------------|
|                             | Offset Support                      | Roof Support      |
| ASHT+ / HT6103+ (6" dia).   | 28 feet (8.54 m)                    | 29 feet (8.84 m)  |
| S-2100+ / HT6000+ (6" dia). | 18 feet (5.49 m)                    | 20 feet (6.1 m)   |
| AC (6" dia).                | 40 feet (12.19 m)                   | 50 feet (15.20 m) |

Table 6

CHIMNEY CHASE AND MULTIPLE TERMINATIONS

For the purpose of this manual, a chimney chase is considered a part of the chimney system rather than part of a building. The termination must be placed a minimum of 18" (460 mm) above the chase.

For installations where more than one chimney is located in the same chase or within the same area, we suggest that their terminations be separated by at least 16" (410 mm) horizontally, and 18" (460 mm) vertically. This separation is to prevent smoke migrating from one chimney to another (see Figure 30).

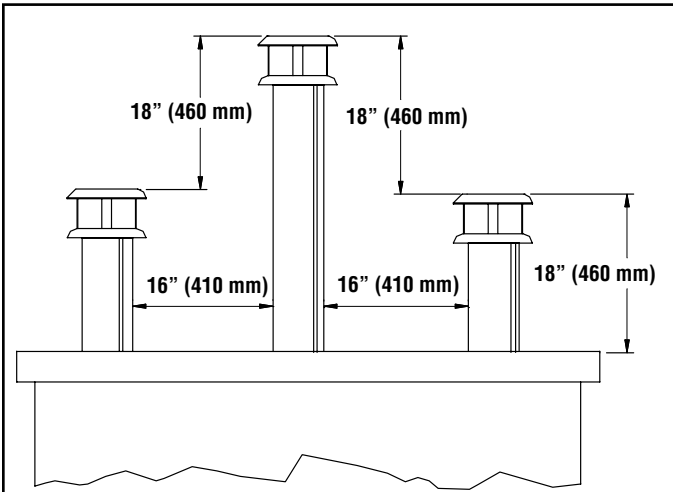


Figure 30

CHIMNEY ADAPTOR \* (S-2100+ / HT6000+) CANADA ONLY

The fireplace is normally supplied with a chimney adaptor suitable for the ASHT+\* / HT6103+\* chimney. If you want to install a S-2100+\* / HT6000+\* chimney, an adaptor is available (6UCA\*) (Figure 31). A separate starter section will also be required if AC\* chimney is installed.

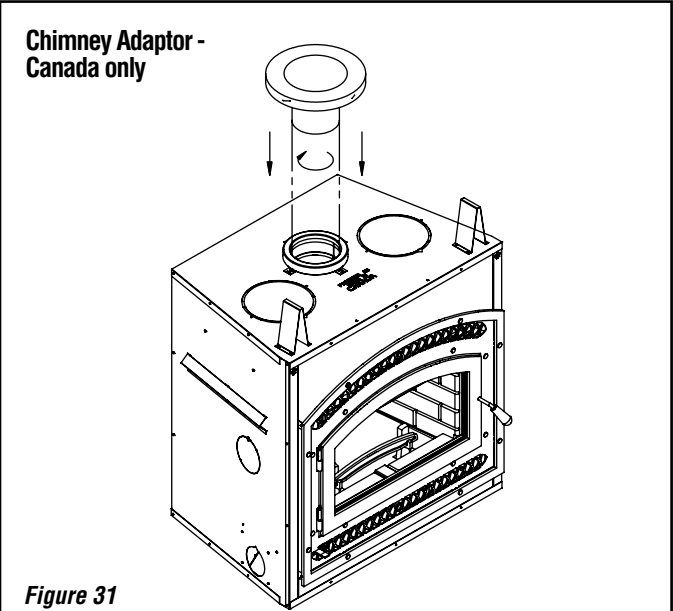


Figure 31

## INSTALLATION INSTRUCTIONS FOR MASONRY APPLICATION

**WARNING:** Before starting the installation, the masonry chimney must be inspected by a qualified chimney sweep.

The following requirements must be respected:

1. The chimney must be absolutely clear of any soot residue or creosote. Check for cracks, loose or missing bricks that could inhibit correct installation of the liner.
2. The clearance to combustibles must be a minimum of 1" between the outside of the masonry and any wood framing or loose insulation.
3. The chimney must be built in accordance with the current building code.
4. No other appliance can be connected to the same chimney.
5. The clearances to combustibles for these fireplace connectors are 2" on the side and bottom and 16" at the top.
6. The connector parts are not necessary if the connection between the insulated length and the stainless steel liner is done within the masonry chimney.

### Installation:

The chimney must be relined with a stainless steel liner model Tubinox™\* or Projet® SS\* of the same diameter as the outlet of the fireplace.

For connection at a 30° angle, a special connector (BISUMA30\*) must be used to connect the liner to the insulated chimney.

**\* IMPORTANT NOTE - The use of a 45° connector (BISUMA\*) is approved for use in Canada ONLY. Installations in the USA must use the 30° connector (BISUMA30\*).**

### Follow these steps:

- 1- Position the fireplace in its location. Temporarily install the ASHT+\* elbow on the top of the fireplace and, using a level, mark with an oval the location where the flue liner will enter the masonry chimney.
- 2- In the middle of the oval, drill a hole in the masonry chimney at 30°.
- 3- Increase the size of the hole until a 30° Tubinox\* liner elbow can be easily slipped through.
- 4- Slide the liner down from the top of the masonry chimney until you reach the hole level.
- 5- Slip through the hole a 30° liner elbow and connect it to the liner.
- 6- Add a small liner section to the liner elbow which will allow the liner to extend at least 12" (measured at the top of the liner) from the masonry chimney.
- 7- Seal the opening around the liner with high temperature refractory cement.
- 8- The next steps must be done in the following order:

### See typical installation illustrated below.

- A. Select the ASHT+\* length that will fit between the elbow and the liner so that it will slide at least 2" over the liner section (You may need to cut the liner for a better fit).
- B. Take that section and the BISUMA30\* cover and slide it over the liner. Make sure you have enough opening to be able to install the ASHT+\* elbow without difficulty.
- C. Install the 30° elbow on the fireplace.
- D. Slide the length section back down on the elbow and twist lock the two together.
- E. Pull the cover down over the length and install the insulation pad over the liner; be careful to cover the liner completely.
- F. Slide back the cover over the insulation and fix it in place using the 3 metal screws supplied.

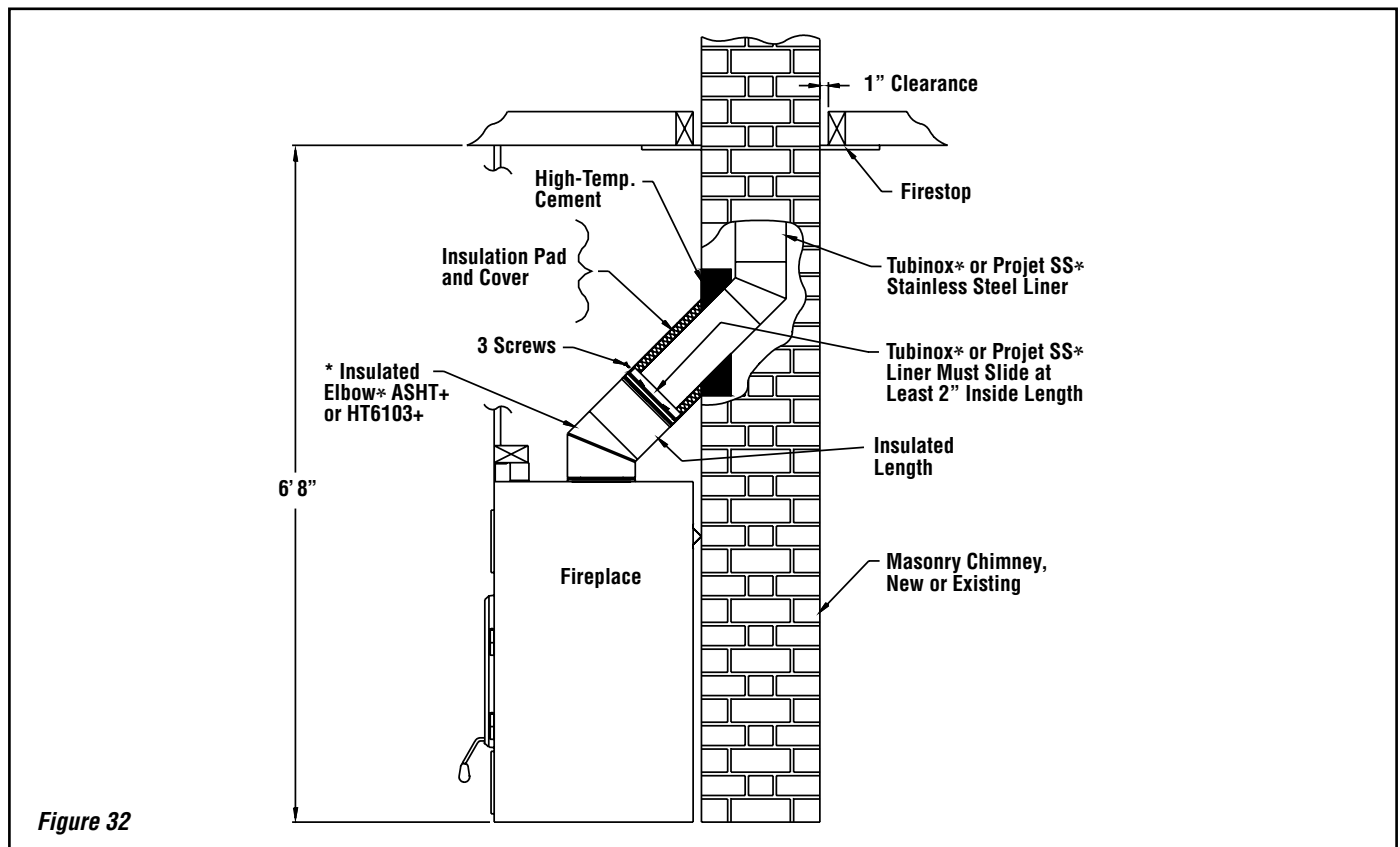


Figure 32

## OPTIONAL INSTALLATION ACCESSORIES

| Installation Accessories                                                                                                                                          |                |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Description                                                                                                                                                       | Cat./ Part No. |
| <b>Facades (Required - Order Separately)</b>                                                                                                                      |                |
| Montecito™ Facade Black, MFBK                                                                                                                                     | H4843          |
| Montecito Facade Hammered Steel, MFMC                                                                                                                             | H4845          |
| <b>Doors (Required - Order Separately)</b>                                                                                                                        |                |
| Montecito Door, Black, MCBK                                                                                                                                       | F1857          |
| Montecito Door, Hammered Steel, MCMC                                                                                                                              | F1858          |
| Cast Iron Door, Black, BWBK                                                                                                                                       | F1859          |
| <b>Outside Air Kit (included with fireplace)</b>                                                                                                                  |                |
| Outside Air Coupler To Connect Outside Air (UZI) To Fireplace, UZIAD                                                                                              | UZIAD          |
| Outside Air Ducting - includes 4" insulated flex x 10' long, UZI                                                                                                  | UZI            |
| <b>Gravity Kit</b>                                                                                                                                                |                |
| <b>Gravity kit:</b> Complete double duct system includes: 2 elbows 90°, 2 telescopic lengths, 2 grill supports and 2 black grills, 2 fireplace adaptors, 7B30ZK-1 | H8947          |
| <b>Gravity Kit Accessories</b>                                                                                                                                    |                |
| Elbow 90°, 8" dia., 7B26ZE90                                                                                                                                      | H8948          |
| Elbow 45°, 8" dia., 7B26ZE45                                                                                                                                      | H8949          |
| Telescopic length, 8" dia. (15" to 26"), 7B26ZLA                                                                                                                  | H8950          |
| Adjustable length 8" dia (2" - 5"), 7B26ZL2A                                                                                                                      | H8951          |
| Length two (2) feet, 8KL2                                                                                                                                         | H8954          |
| Length one (1) feet, 8KL1                                                                                                                                         | H8953          |
| Wall radiation shield, 8" I.D., 7B26ZR                                                                                                                            | H8952          |

| Fireplace Kits                                                                                                                                                                                                                                         |                |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Description                                                                                                                                                                                                                                            | Cat./ Part No. |
| Rigid firescreen                                                                                                                                                                                                                                       | BUCEBWZN       |
| <b>Central Forced Air Kit Accessories ❶</b>                                                                                                                                                                                                            |                |
| Central Forced Air Kit, Central forced air kit including: blower (BISZY), flex adaptor (BISAF), 2 clamps, variable speed control (VRUW), thermo-disk (VTU), fan to flexible pipe adapter (BISAVF), back draft damper (BISBD), aluminium tape, BISFWK-1 | BISFWK-1       |
| Flexible pipe 5" I.D. x 15 ft. Long, 5FLEX15                                                                                                                                                                                                           | 5FLEX15        |
| Flexible pipe 5" I.D. x 30 ft. Long, 5FLEX25                                                                                                                                                                                                           | 5FLEX25        |
| Heating and cooling thermostat, 24V, HCTW                                                                                                                                                                                                              | HCTW           |

❶ **Not tested under EPA certification. If installed, this appliance no longer qualifies for EPA certification.**

\* **For installation, follow the instructions included with the Central Forced Air Kit.**

## REPLACEMENT PARTS LIST

| Montecito™ Replacement Parts                                               |               |
|----------------------------------------------------------------------------|---------------|
| Description                                                                | Part/Cat. No. |
| Blower (heat activated on/off pre-wired), UZY5                             | UZY5          |
| Blower motor speed control (wall mount), VRUW                              | VRUW          |
| Snap Disc, Blower                                                          | VTU           |
| Baffle refractory (2 pieces)                                               | PR-IS02205    |
| Back refractory                                                            | PR-SR2618     |
| Right side refractory                                                      | PR-SR2619D    |
| Left side refractory                                                       | PR-SR2619G    |
| Bottom refractory                                                          | PR-SR2201     |
| Front refractory, right side                                               | PR-SR2202D    |
| Front refractory, left side                                                | PR-SR2202G    |
| Door handle                                                                | PR-SR1787     |
| Hinge Assembly, Fireplace and Door                                         | PR-SR2395TCE  |
| Decorative Screw Caps, Black (2)                                           | PR-SACMEFBK   |
| Decorative Screw Caps, Brushed Nickel (2)                                  | PR-SACMEFBN   |
| Ceramic glass panel                                                        | PR-SR2222-1   |
| Secondary air tube                                                         | PR-SR2271     |
| Cast-iron Log Retainer Supports - Grate (2)                                | PR-SR2324     |
| Cast Iron Log Retainer Bar                                                 | PR-SR2323     |
| Gasket Kit, Glass, 69" (1 x 5/16") (steel and cast doors)                  | PR-SR1823H    |
| Gasket Kit, Steel Door Frame, 73" (5/8" dia.)                              | PR-SR1685D    |
| Gasket Kit, Cast Door Frame, 73" (5/8" dia.)                               | PR-SR1823G    |
| Touch-up Paint, Aerosol, Black Metallic SBMB6309                           | H8159         |
| Touch-up Paint, Charcoal (for hammered steel facade)                       | PR-P6201      |
| Coupler, Outside Air (connects UZI to fireplace)                           | UZIAD         |
| Coupler for AC Chimney (connects ACZI to fireplace)                        | H3274         |
| Blower 250 CFM for central forced air kit, BISZY                           | BISZY         |
| Blower variable speed control with decorative wall plate for (BISZY), VRUW | VRUW          |
| Thermo-disk, on/off blower control (for BISZY), VTU                        | VTU           |
| Blower to flexible pipe adaptor, BISAVF                                    | BISAVF        |
| Backdraft damper, BISBD                                                    | BISBD         |
| Fireplace to Flex adaptor and 2 clamps, BISAF                              | BISAF         |

Contact an IHP dealer to obtain any of these parts. Never use substitute materials not approved by IHP. Use of non-approved parts can result in poor performance and safety hazards.

## SPECIFICATIONS

| Cat. No. | Model     |
|----------|-----------|
| H4841    | Montecito |

| Product Reference Information         |                         |
|---------------------------------------|-------------------------|
| Weight                                | 300 lbs                 |
| Height                                | 36"                     |
| Width                                 | 36"                     |
| Depth                                 | 24-1/2"                 |
| Firebox W x H x D - measured in front | 22" x 11-3/4" x 12"     |
| Chimney Weight ASHT (6" dia)          | 6.25 lb per linear foot |
| Chimney Weight AC (6" dia.)           | 3.25 lb per linear foot |
| Chimney weight S-2100+ (6" dia.)      | 10.8 lb per linear foot |

## CLEARANCE TO COMBUSTIBLES

The following clearances meet the minimum requirements for a safe installation;

**Side wall:** 17" (324 mm) measured from the fireplace side

**Ceiling:** 6' 8" (2,032 mm) measured from the base of the fireplace

### Fireplace enclosure:

Bottom: 0"

Side: 0" to spacer

Back: 0" to spacer

Top: Do not fill the space above the fireplace with any material (Except the wood framing. See **Page 9, Figure 8**)

**Chimney:** 2" (50 mm)

**Mantel:** 42" (1067 mm) measured from the base of the fireplace.



## SECURITY CHIMNEYS™ - PARTS AND COMPONENTS LISTS

The components listed below must be ordered from Security Chimneys International™. Contact your Security Chimneys Distributor or Dealer for ordering information.

Security Chimneys International Limited 450-973-9999  
 2125 Monterey, Laval, Quebec 1-800-361-4909 (USA)  
 Canada, H7L 3T6 1-800-667-3387 (Canada)  
 www.securitychimneys.com

| Secure Temp ASHT 1" High Temp. Insulated Stainless Steel Chimney<br>6" I.D. and 8" O.D., Double-Wall Stainl. Steel, Listed to CAN/ULC-S604 and UL-103HT |               |
|---------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| Description                                                                                                                                             | Part/Cat. No. |
| <b>Lengths and Misc. Chimney Components</b>                                                                                                             |               |
| 8" length, 6" Dia., 6L8                                                                                                                                 | 6L8           |
| 12" length, 6" Dia., 6L12                                                                                                                               | 6L12          |
| 18" length, 6" Dia., 6L18                                                                                                                               | 6L18          |
| 24" length, 6" Dia., 6L24                                                                                                                               | 6L24          |
| 36" length, 6" Dia., 6L36                                                                                                                               | 6L36          |
| 48" length, 6" Dia., 6L48                                                                                                                               | 6L48          |
| Adjustable Length 12", 6" Dia., 6LA                                                                                                                     | 6LA           |
| 15° elbow, 6" Dia., 6E15                                                                                                                                | 6E15          |
| 30° elbow, 6" Dia., 6E30                                                                                                                                | 6E30          |
| Rain Termination Cap, 6" Dia., 6CC                                                                                                                      | 6CC           |
| Spark Arrester Screen (universal spark arrester band), PE                                                                                               | PE            |
| Wall Band, BM                                                                                                                                           | BM            |
| <b>Supports</b>                                                                                                                                         |               |
| Offset Support, SO                                                                                                                                      | SO            |
| Roof Support, ST                                                                                                                                        | ST            |
| Roof Brace, BS2                                                                                                                                         | BS2           |
| <b>Firestops</b>                                                                                                                                        |               |
| Firestop, 6BF                                                                                                                                           | 6BF           |
| Radiation Shield, 6RS                                                                                                                                   | 6RS           |
| Insulated Attic Radiation Shield, 6RSA                                                                                                                  | 6RSA2         |
| Insulated Wall Radiation Shield, 6RSM                                                                                                                   | 6RSM          |
| Insulated Wall Radiation Shield, 30°, 6RSMI30                                                                                                           | 6RSMI30       |
| Uninsulated Wall Radiation Shield, 30°, 6RSM30                                                                                                          | 6RSM30        |
| Attic Radiation Shield                                                                                                                                  | H0487         |
| <b>Roof Flashings</b>                                                                                                                                   |               |
| Flat Roof Flashing, 6FR                                                                                                                                 | 6FR           |
| 1/12 - 7/12 (5° - 30°), 6FAR                                                                                                                            | 6FAR          |
| 8/12 - 12/12 (30° - 45°), 6FBR                                                                                                                          | 6FBR          |
| Storm Collar, 6FC                                                                                                                                       | 6FC           |

**Fireplace Model MONTE - Approved Venting Components manufactured by Security Chimneys International™ only.**

- **6" diameter chimney** - AC (air cooled), Secure Temp® ASHT+ (or Nova Temp® HT6103+) and Secure Temp S-2100+ (or Nova Temp HT6000+).
- **6" diameter chimney for relining masonry chimneys** - Tubinox™ chimney (or Projet® SS), 6" diameter with adaptor for installation in a masonry chimney.

### NOTES:

- ① Nova Temp HT6000+ is equivalent to Secure Temp S-2100+
- ② Nova Temp HT6103+ is equivalent to Secure Temp ASHT+
- ③ This appliance is equipped with the ASHT Chimney Adaptor. When other chimney is used, a chimney adaptor for that chimney will be required.
- ④ Chimney Adaptor (S-2100+ / HT6000+) for CANADA ONLY - If you want to install a S-2100+ / HT6000+ chimney, an adaptor is available (6UCA).
- ⑤ AC Chimney is NOT recommended at elevations above 4,000 feet or in cold climates (climates where temperatures will fall below 32° F / 0° C). When using AC chimney, an AC6SB (H3779) starter section must be used before installing an elbow. When an offset is needed immediately off the top of the fireplace, an elbow starter section, AC6SB30 (H3780), is available.

## SECURITY CHIMNEYS™ - PARTS AND COMPONENTS LISTS

The components listed below must be ordered from Security Chimneys International™. Contact your Security Chimneys Distributor or Dealer for ordering information.

Security Chimneys International Limited 450-973-9999  
2125 Monterey, Laval, Quebec 1-800-361-4909 (USA)  
Canada, H7L 3T6 1-800-667-3387 (Canada)  
www.securitychimneys.com

| <b>(AC) Air-Cooled Chimney System*</b>                                                                                                         |               |
|------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| 6" I.D. and 11" O.D. Air Cooled, Stainl. Steel inner and zinc coated steel exterior                                                            |               |
| * AC Chimney is NOT recommended at elevations above 4,000 feet or in cold climates (climates where temperatures will fall below 32° F / 0° C). |               |
| Description                                                                                                                                    | Cat./Part No. |
| <b>One of the following adaptors is required if installing an AC chimney system</b>                                                            |               |
| Starter Section (adaptor), 6", AC, AC6SB                                                                                                       | H3779         |
| Starter 30° Elbow, 6" AC, AC6SB30                                                                                                              | H3780         |
| <b>The following outside air kit is required if installing an AC chimney system</b>                                                            |               |
| Chimney Outside Air Kit (flex, insulation, outside register and coupling), ACZI                                                                | H1967         |
| <b>Lengths and Misc. Chimney Components</b>                                                                                                    |               |
| 12" Length, 6" Dia. x 12" Long, AC6L12                                                                                                         | H0472         |
| 18" Length, 6" Dia. x 12" Long, AC6L18                                                                                                         | H0473         |
| 36" Length, 6" Dia. x 36" Long, AC6L36                                                                                                         | H0474         |
| 48" Length, 6" Dia. x 48" Long, AC6L48                                                                                                         | H0475         |
| 15° Elbow, 6" Dia., AC6E15                                                                                                                     | H0476         |
| 30° Elbow, 6" Dia., AC6E30                                                                                                                     | H0477         |
| Rain Termination Cap, 6" Dia., AC6CPR                                                                                                          | H0478         |
| Spark Arrester Screen (universal spark arrester band), PE                                                                                      | PE            |
| Wall Band, XBM                                                                                                                                 | XBM           |
| <b>Supports</b>                                                                                                                                |               |
| Offset Support, SO                                                                                                                             | SO            |
| Support Section, AC6SL                                                                                                                         | H0481         |
| Roof Support, ST                                                                                                                               | ST            |
| Roof Brace, BS2                                                                                                                                | BS2           |
| <b>Roof Flashings</b>                                                                                                                          |               |
| Flat Roof Flashing, ACF                                                                                                                        | H0494         |
| 1/12 - 7/12 (5° - 30°), AC Adj. Roof Flashing, FA                                                                                              | H0495         |
| 8/12 - 12/12 (30° - 45°), AC Adj. Roof Flashing, FB                                                                                            | H0496         |
| Storm collar, ACFC                                                                                                                             | H0500         |
| <b>Misc.</b>                                                                                                                                   |               |
| Telescopic attic radiation shield, ACRST                                                                                                       | H0498         |
| Firestop, ACFB                                                                                                                                 | H0485         |
| Radiation Shield, ACRS                                                                                                                         | H0486         |
| Attic Radiation Shield, ACRSA                                                                                                                  | H0487         |
| Insulated Wall Radiation Shield, 30°, ACRSMI30                                                                                                 | H0489         |

| <b>Tubinox™ LL Chimney Lining System</b>                                                                                                |               |
|-----------------------------------------------------------------------------------------------------------------------------------------|---------------|
| Rigid Stainless Steel Liner For Relining A Masonry Chimney, 6" Diameter<br><i>Listed to ULC-S635M, UL-1777 and ULC-S640M at 2100° F</i> |               |
| Description                                                                                                                             | Cat./Part No. |
| 6" Length, 6" Dia., 6LL6                                                                                                                | 6LL6          |
| 12" Length, 6" Dia., 6LL12                                                                                                              | 6LL12         |
| 24" Length, 6" Dia., 6LL24                                                                                                              | 6LL24         |
| 36" Length, 6" Dia., 6LL36                                                                                                              | 6LL36         |
| 48" Length, 6" Dia., 6LL48                                                                                                              | 6LL48         |
| Adjustable Length (7" to 11"), 6" Dia., 6L7A                                                                                            | 6L7A          |
| Split Base Tee, 6" Dia., 6LT                                                                                                            | 6LT           |
| Tee Cap, 6" Dia., 6TCS                                                                                                                  | 6TCS          |
| Twist Lock Tee Cap, 6" Dia., 6LTC                                                                                                       | 6LTC          |
| Elbow 30°, 6" Dia., 6LE30                                                                                                               | 6LE30         |
| Elbow 45°, 6" Dia., 6LE45                                                                                                               | 6LE45         |
| Elbow 90°, 6" Dia., 6LE90                                                                                                               | 6LE90         |
| Rain Termination Cap (regular), 6" Dia., 6LCS                                                                                           | 6LCS          |
| Rain Termination Cap (deluxe), 6" Dia., 6LCC                                                                                            | 6LCC          |
| <b>Supports</b>                                                                                                                         |               |
| Top Support, 6LST                                                                                                                       | 6LST          |
| Support Assembly, 6LSA                                                                                                                  | 6LSA          |
| Interior Support, 6LSB                                                                                                                  | 6LSB          |
| Adaptor Flexible Pipe (male), 6LAAM                                                                                                     | 6LAAM         |
| Adaptor Flexible Pipe (female), 6LAAF                                                                                                   | 6LAAF         |
| Stainless Steel Flex - five (5) feet Long, 6LLFLEX                                                                                      | 6LLFLEX       |
| Adjustable Insulated Wall Radiation Shield 6" - 12", 6LRSMI                                                                             | 6LRSMI        |
| <b>Adaptors to Masonry Chimney</b>                                                                                                      |               |
| Masonry Chimney Adaptor, 45°, BISUMA<br>(for use with Tubinox liner) CANADA ONLY                                                        | BISUMA        |
| Masonry Chimney Adaptor, 30°, BISUMA30<br>(for use with Tubinox liner)                                                                  | BISUMA30      |

| <b>Gravity Kit Accessories</b>                   |          |
|--------------------------------------------------|----------|
| Elbow 90°, 8" dia., 7B26ZE90                     | 7B26ZE90 |
| Elbow 45°, 8" dia., 7B26ZE45                     | 7B26ZE45 |
| Telescopic length, 8" dia. (15" to 26"), 7B26ZLA | 7B26ZLA  |
| Adjustable length 8" dia (2" - 5"), 7B26ZL2A     | 7B26ZL2A |
| Wall radiation shield, 8" I.D., 7B26ZR           | 7B26ZR   |
| Black grill with support, 7B30ZO                 | 7B30ZO   |
| Brass grill (for 7B30ZK), 7B30ZGB                | 7B30ZGB  |
| Length one (1) feet, 8KL1                        | 8KL1     |
| Length two (2) feet, 8KL2                        | 8KL2     |
| Length three (3) feet, 8KL3                      | 8KL3     |
| Length four (4) feet, 8KL4                       | 8KL4     |
| Length five (5) feet, 8KL5                       | 8KL5     |



## Innovative Hearth Products Astria™ Brand EPA Wood Burning Fireplace Limited Lifetime Warranty

### THE WARRANTY

Innovative Hearth Products ("IHP") Limited Lifetime Warranty warrants your Astria™ Brand EPA Wood Burning Fireplace ("Product") to be free from defects in materials and workmanship at the time of manufacture. The Product body, firebox and ceramic glass carry the Limited Lifetime Warranty. Ceramic glass carries the Limited Lifetime Warranty against thermal breakage only. After installation, if covered components manufactured by IHP are found to be defective in materials or workmanship during the Limited Lifetime Warranty period and while the Product remains at the site of the original installation, IHP will, at its option, repair or replace the covered components. If repair or replacement is not commercially practical, IHP will, at its option, refund the purchase price or wholesale price of the IHP product, whichever is applicable. IHP will also pay IHP prevailing labor rates, as determined in its sole discretion, incurred in repairing or replacing such components for up to five years. THERE ARE EXCLUSIONS AND LIMITATIONS to this Limited Lifetime Warranty as described herein.

### COVERAGE COMMENCEMENT DATE

Warranty coverage begins on the date of installation. In the case of new home construction, warranty coverage begins on the date of first occupancy of the dwelling or six months after the sale of the Product by an independent IHP dealer/distributor, whichever occurs earlier. The warranty shall commence no later than 24 months following the date of product shipment from IHP, regardless of the installation or occupancy date.

### EXCLUSIONS AND LIMITATIONS

This Limited Lifetime Warranty applies only if the Product is installed in the United States or Canada and only if operated and maintained in accordance with the printed instructions accompanying the Product and in compliance with all applicable installation and building codes and good trade practices.

This warranty is non-transferable and extends to the original owner only. The Product must be purchased through a listed supplier of IHP and proof of purchase must be provided. The Product body and firebox carry the Limited Lifetime Warranty from the date of installation. Vent components, trim components and paint are excluded from this Limited Lifetime Warranty. The following do not carry a Limited Lifetime Warranty but are warranted as follows:

**Cast Iron Heat Exchanger** – Replacement for five years from the date of installation

**Cast iron parts** – Replacement for one year from the date of installation

**Catalyst** – Carries a separate warranty. Refer to the warranty certificate provided for that part

**Electrical components** – Repair or replacement for one year from date of installation

**Gaskets** – Replacement for one year from the date of installation.

**Gold & nickel plating** – Replacement for two years from date of installation. Excludes tarnishing

**Refractory & screens** – Replacement for two years from date of installation. Excludes hairline cracks

**Removable air tubes** – Repair or replacement for seven years from date of installation. IHP prevailing labor rates for years one through five.

**Labor coverage** – Prevailing IHP labor rates apply for the warranty period of the component, unless otherwise noted

**Parts not otherwise listed carry a 90 day warranty from the date of installation.**

**Whenever practicable, IHP will provide replacement parts, if available, for a period of 10 years from the last date of manufacture of the Product.**

IHP will not be responsible for: (a) damages caused by normal wear and tear, accident, riot, fire, flood or acts of God; (b) damages caused by abuse, negligence, misuse, or unauthorized alteration or repair of the Product affecting its stability or performance. (The Product must be subject to normal use with approved fuels listed in the Operation Manual provided with the product. Fuel products with abnormal burning characteristics, including but not limited to fuel such as driftwood, coal or plywood and wood products using a binder may burn at excessive temperatures and may cause damage to the Product or may cause it to function improperly; IHP stoves, inserts and high efficiency EPA fireplaces are approved for burning dry seasoned wood only.); (c) damages caused by failing to provide proper maintenance and service in accordance with the instructions provided with the Product; (d) damages, repairs or inefficiency resulting from faulty installation or application of the Product.

Coverage of this Limited Lifetime Warranty is conditional upon the appliance being operated without the use of grates, irons or any other method to elevate the fire.

IHP is not responsible for inadequate system draft caused by air conditioning and heating systems, mechanical ventilation systems, or general construction conditions which may generate negative air pressure in the room in which the appliance is installed. Additionally IHP assumes no responsibility for smoking conditions caused by inadequate chimney height, adjoining trees or buildings, adverse wind conditions or unusual environmental factors and conditions. Certain IHP Products are listed for use with Security Chimneys International, Ltd. chimney systems only. Use of chimney components other than that specified in the Product manual will void the Product warranty.

This Limited Lifetime Warranty covers only parts and labor as provided herein. In no case shall IHP be responsible for materials, components or construction which are not manufactured or supplied by IHP or for the labor necessary to install, repair or remove such materials, components or construction. Additional utility bills incurred due to any malfunction or defect in equipment are not covered by this Limited Lifetime Warranty. All replacement or repair components will be shipped F.O.B. from the nearest stocking IHP factory.

### LIMITATION ON LIABILITY

It is expressly agreed and understood that IHP's sole obligation and the purchaser's exclusive remedy under this warranty, under any other warranty, expressed or implied, or in contract, tort or otherwise, shall be limited to replacement, repair, or refund, as specified herein.

In no event shall IHP be liable for any incidental or consequential damages caused by defects in the Product, whether such damage occurs or is discovered before or after replacement or repair, and whether such damage is caused by IHP's negligence. IHP has not made and does not make any representation or warranty of fitness for a particular use or purpose, and there is no implied condition of fitness for a particular use or purpose.

IHP makes no expressed warranties except as stated in this Limited Lifetime Warranty. The duration of any implied warranty is limited to the duration of this expressed warranty.

No one is authorized to change this Limited Lifetime Warranty or to create for IHP any other obligation or liability in connection with the Product. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The provisions of this Limited Lifetime Warranty are in addition to and not a modification of or subtraction from any statutory warranties and other rights and remedies provided by law.

### INVESTIGATION OF CLAIMS AGAINST WARRANTY

IHP reserves the right to investigate any and all claims against this Limited Lifetime Warranty and to decide, in its sole discretion, upon the method of settlement.

To receive the benefits and advantages described in this Limited Lifetime Warranty, the appliance must be installed and repaired by a licensed contractor approved by IHP.

Contact IHP at the address provided herein to obtain a listing of approved dealers/distributors. **IHP shall in no event be responsible for any warranty work done by a contractor that is not approved without first obtaining IHP's prior written consent.**

### HOW TO REGISTER A CLAIM AGAINST WARRANTY

In order for any claim under this warranty to be valid, you must contact the IHP dealer/distributor from which you purchased the product. If you cannot locate the dealer/distributor, then you must notify IHP in writing. IHP must be notified of the claimed defect in writing within 90 days of the date of failure. Notices should be directed to the IHP Warranty Department at 1508 Elm Hill Pike, Suite 108; Nashville, TN 37210 or visit our website at [WWW.ASTRIA.US.COM](http://WWW.ASTRIA.US.COM).

## WARRANTY

Your fireplace is covered by a limited warranty. Please read the warranty to be familiar with its coverage.

Retain this manual. File it with your other documents for future reference.

## PRODUCT REFERENCE INFORMATION

We recommend that you record the following important information about your fireplace. Please contact your IHP dealer for any questions or concerns.

## REPLACEMENT PARTS

See **Page 21** for a complete replacement parts list. Use only parts supplied from the manufacturer.

Normally, all parts should be ordered through your IHP distributor or dealer. Parts will be shipped at prevailing prices at time of order.

When ordering repair parts, always give the following information:

1. The model number of the appliance.
2. The serial number of the appliance.
3. The part number.
4. The description of the part.
5. The quantity required.
6. The installation date of the appliance.

If you encounter any problems or have any questions concerning the installation or application of this system, please contact your dealer.

### IHP

**1508 Elm Hill Pike, Suite 108**

**Nashville, TN 37210**

**Visit us at [www.Astria.us.com](http://www.Astria.us.com)**

Model Number \_\_\_\_\_  
Serial Number \_\_\_\_\_  
Date Installed \_\_\_\_\_  
Dealer's Name \_\_\_\_\_  
Dealer's Phone Number \_\_\_\_\_



IHP reserves the right to make changes at any time, without notice, in design, materials, specifications, and prices, and also to discontinue colors, styles, and products. Consult your local distributor for fireplace code information.

