

IronStrike GrandView Wood Series Blower Motor Wiring Schematic

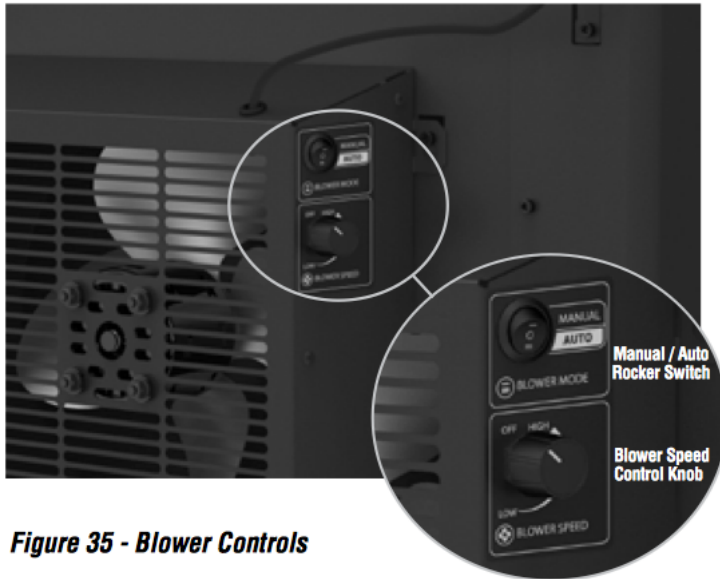


Figure 35 - Blower Controls



NOTE: SWITCH CONDITIONS
GIVEN AT ROOM TEMPERATURE

N/C = NORMALLY CLOSED
N/O = NORMALLY OPEN

—< = FEMALE DISCONNECT
—> = MALE DISCONNECT
—○ = STUD CONNECTION

