



# Addendum Instructions for Installing Heat Shield on IHP Direct-Vent Gas Fireplaces


P/N 900612-00 Rev. NC 11/2015

For more information, visit [IHP.US.com](http://IHP.US.com)

This addendum is in addition to the Installation and Operation Manuals provided with the models listed in **Table 1**. Use these instructions when installing the provided heat shield.

| <b>*Table 1</b>                                            |
|------------------------------------------------------------|
| <b>Applicable Superior® Models - Manual 900298-00</b>      |
| DRT3545 / DRC3545                                          |
| <b>Applicable Astria® Models - Manual 900298-01</b>        |
| Scorpio 45 / Scorpio CD45                                  |
| <b>Applicable Comfort Flame™ Models - Manual 900475-00</b> |
| Aurora45 / AuroraCD45                                      |


**NOTE:** It is important to ensure proper log and or media placement per the manual when installing these units. Verify pilot flame is not obstructed.

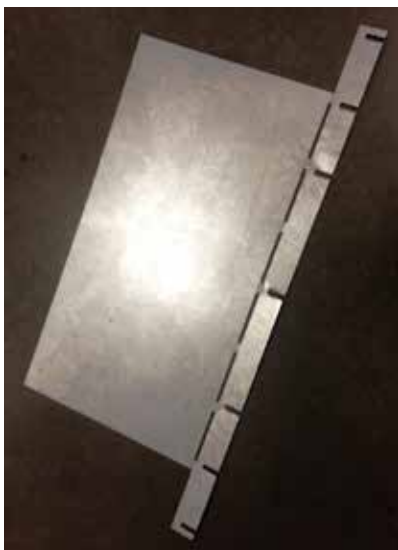

**Figure 1 - Heat Shield**

## Installation Instructions:

1. Locate the supplied heat shield shipped on top of the unit. shown in **Figure 1**.
2. Install the heat shield and the non-combustible board bracket on top of unit. After installing unit in framing, bend shield up at 45 degree angle as shown in **Figure 2**.
3. Follow instructions of Installation and Operation Manual provided with the fireplaces listed in **Table 1**.

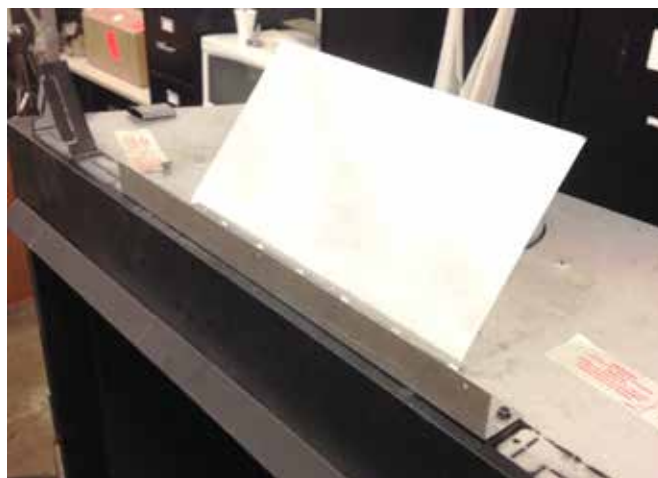

**Figure 2 - Heat Shield Installed**

IHP reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

