

IronStrike Wood Stove Blower Motor Wiring Schematic



**Blower Speed Control
Knob (rheostat)**

**Manual / Auto
Rocker Switch**



NOTE: SWITCH CONDITIONS
GIVEN AT ROOM TEMPERATURE

N/C = NORMALLY CLOSED
N/O = NORMALLY OPEN

—< = FEMALE DISCONNECT
—> = MALE DISCONNECT
—○ = STUD CONNECTION

