



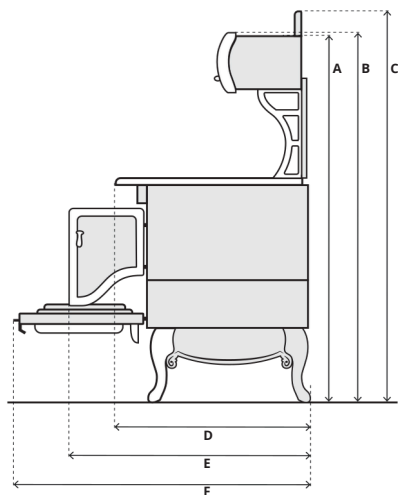


|          |                                            |                                  |
|----------|--------------------------------------------|----------------------------------|
| <b>A</b> | Height to top of upper cabinet door frame* | 63 <sup>7</sup> / <sub>8</sub> " |
| <b>B</b> | Height to top of upper cabinet*            | 63 <sup>1</sup> / <sub>2</sub> " |
| <b>C</b> | Height to top of crestring*                | 67 <sup>7</sup> / <sub>8</sub> " |
| <b>D</b> | Depth from back wall to front of trim rail | 30 <sup>1</sup> / <sub>4</sub> " |
| <b>E</b> | Depth with warmer door open                | 42 <sup>1</sup> / <sub>4</sub> " |
| <b>F</b> | Depth with oven door open                  | 48 <sup>1</sup> / <sub>2</sub> " |

\* Subtract 2 inches from all height values if the short leg option is used.

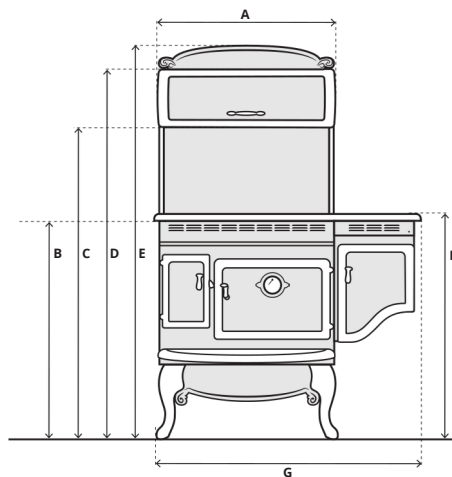

|          |                                            |                                  |
|----------|--------------------------------------------|----------------------------------|
| <b>A</b> | Width of upper cabinet                     | 29 <sup>1</sup> / <sub>2</sub> " |
| <b>B</b> | Height to bottom of trim rail*             | 36 <sup>1</sup> / <sub>2</sub> " |
| <b>C</b> | Height to bottom of upper cabinet*         | 53 <sup>1</sup> / <sub>2</sub> " |
| <b>D</b> | Height to top of upper cabinet door frame* | 63 <sup>7</sup> / <sub>8</sub> " |
| <b>E</b> | Height to top of crest*                    | 67 <sup>7</sup> / <sub>8</sub> " |
| <b>F</b> | Height to smoothtop cook surface*          | 37 <sup>3</sup> / <sub>4</sub> " |
| <b>G</b> | Width of trim rail                         | 44 <sup>1</sup> / <sub>2</sub> " |

\* Subtract 2 inches from all height values if the short leg option is used.

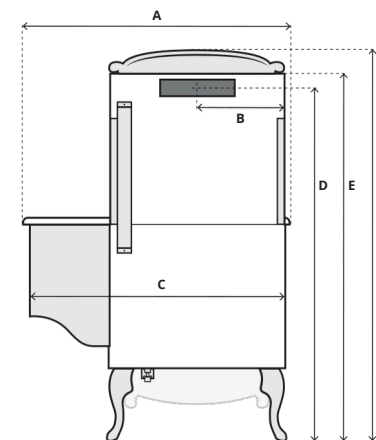

|          |                                     |                                  |
|----------|-------------------------------------|----------------------------------|
| <b>A</b> | Width of trim rail                  | 44 <sup>1</sup> / <sub>2</sub> " |
| <b>B</b> | Width to middle of exhaust outlet   | 15 <sup>3</sup> / <sub>8</sub> " |
| <b>C</b> | Width of main body of range         | 43"                              |
| <b>D</b> | Height to center of exhaust outlet* | 62 <sup>1</sup> / <sub>2</sub> " |
| <b>E</b> | Height to top of upper cabinet*     | 63 <sup>7</sup> / <sub>8</sub> " |
| <b>F</b> | Height to top of crest*             | 67 <sup>7</sup> / <sub>8</sub> " |

\* Subtract 2 inches from all height values if the short leg option is used.

## OVEN

|                                                                                                                     |     |
|---------------------------------------------------------------------------------------------------------------------|-----|
| Electric Self-Cleaning Convection Oven (4.0 cu. ft.) Oven Size: 25" W x 16" H x 16 <sup>5</sup> / <sub>16</sub> " D | Yes |
| Electronic Oven Control                                                                                             | Yes |
| Delayed Start Baking                                                                                                | Yes |
| Dual Element Baking                                                                                                 | Yes |
| Variable Temperature Broil                                                                                          | Yes |
| Door Activated Oven Light                                                                                           | Yes |
| Heavy Duty, Plated Oven Racks                                                                                       | Yes |

## POWER RATING

|                                             |          |
|---------------------------------------------|----------|
| Power Source (208 to 250V) appliance rating | 240V-30A |
|---------------------------------------------|----------|

## RANGETOP

|                                                               |          |
|---------------------------------------------------------------|----------|
| Electric High-speed Radiant Elements under glass (ST)         | Optional |
| Induction Elements                                            | Optional |
| 350 CFM Exhaust Fan standard (recirculating and outside vent) | Yes      |
| 520 CFM In-line Exhaust blower (outside vent only)            | Optional |
| Cooking Surface Light                                         | Yes      |
| "Feather Touch" Tempered Glass Oven Control Panel             | Yes      |

## SHIPPING WEIGHT

425 lbs

## RANGE HOOKUPS

Electrical Cords and Gas Line Connections Electrical receptacles and gas piping should be located in the center of the opening, approximately 6" above the floor.

## RANGE EXHAUST LOCATION

The rectangular duct opening in the back of the cabinet is centered 62 1/4" from the floor (60 1/4" with optional short legs) and 15 3/8" in from the left side of the range cooktop. If you are ducting the exhaust into a rectangular duct in the wall behind the stove, the drywall opening should be 3 3/8" X 10".

If you require an inline or outside wall-mounted blower, please specify when ordering the range (it will be built differently).

If you wish to create an antique "stovepipe" look, Elmira can cut a round hole in the top of the upper cabinet, to which your stove (vent) pipe can be attached. This option requires the optional inline blower.

